

ELECTRIC PERGOLA WALL MOUNTED 2 POSTS

MOTORIZED 3×3/3×4/4×4M













	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	3B-01	2	3B-11	2	3B-12	2
	3B-13	2	3B-14	1	3B-15	1
	3B-18	1	3B-19	15+	3B-20	38+
	3B-21	8	3B-23	26+	3B-24	1
	3B-35	2	3B-36	8	3B-38	4
	3B-39	12+	3B-40	2	3B-41	2
	3B-42	8	3B-30	1	3B-31	1
	3B-48	19+	3B-49	18+	3B-50	1
	3B-51	152+	3B-22	12+		
Carton 2/4	3B-02	1	3B-03	1	3B-04	2
	3B-05/ A/B	4	3B-08	2	3B-09	2
	3B-34	1	3B-29	2		
Carton 3/4	3B-06	10				
Carton 4/4	3B-06	9				



MOTORIZED 3×3M

Item	Drawings	Qty
3B-01		2
3B-02		1
3B-03		1
3B-04		2
3B-05		2
3B-05A		1
3B-05B		1
3B-06		19
3B-08		2
3B-09		2
3B-34		1
3B-29		2




Item	Drawings	Qty
3B-11		2
3B-12		2
3B-13		2
3B-14		1
3B-15	 M8*20 lock nut	1
3B-18		1
3B-19	 M8*20	15+
3B-20		38+
3B-21	 M10*80	8
3B-22		12+
3B-23	 M4.2*19	26+
3B-24		1
3B-35		2

Item	Drawings	Qty
3B-36		8
3B-38	 M5.5*25	4
3B-40		2
3B-41		2
3B-42	 M10*20	8
3B-39	 M8*60	12+
3B-30		1
3B-31		1
3B-48		19+
3B-49		18+
3B-50		1
3B-51	 M4.2*25	152+





























MOTORIZED 3×3M

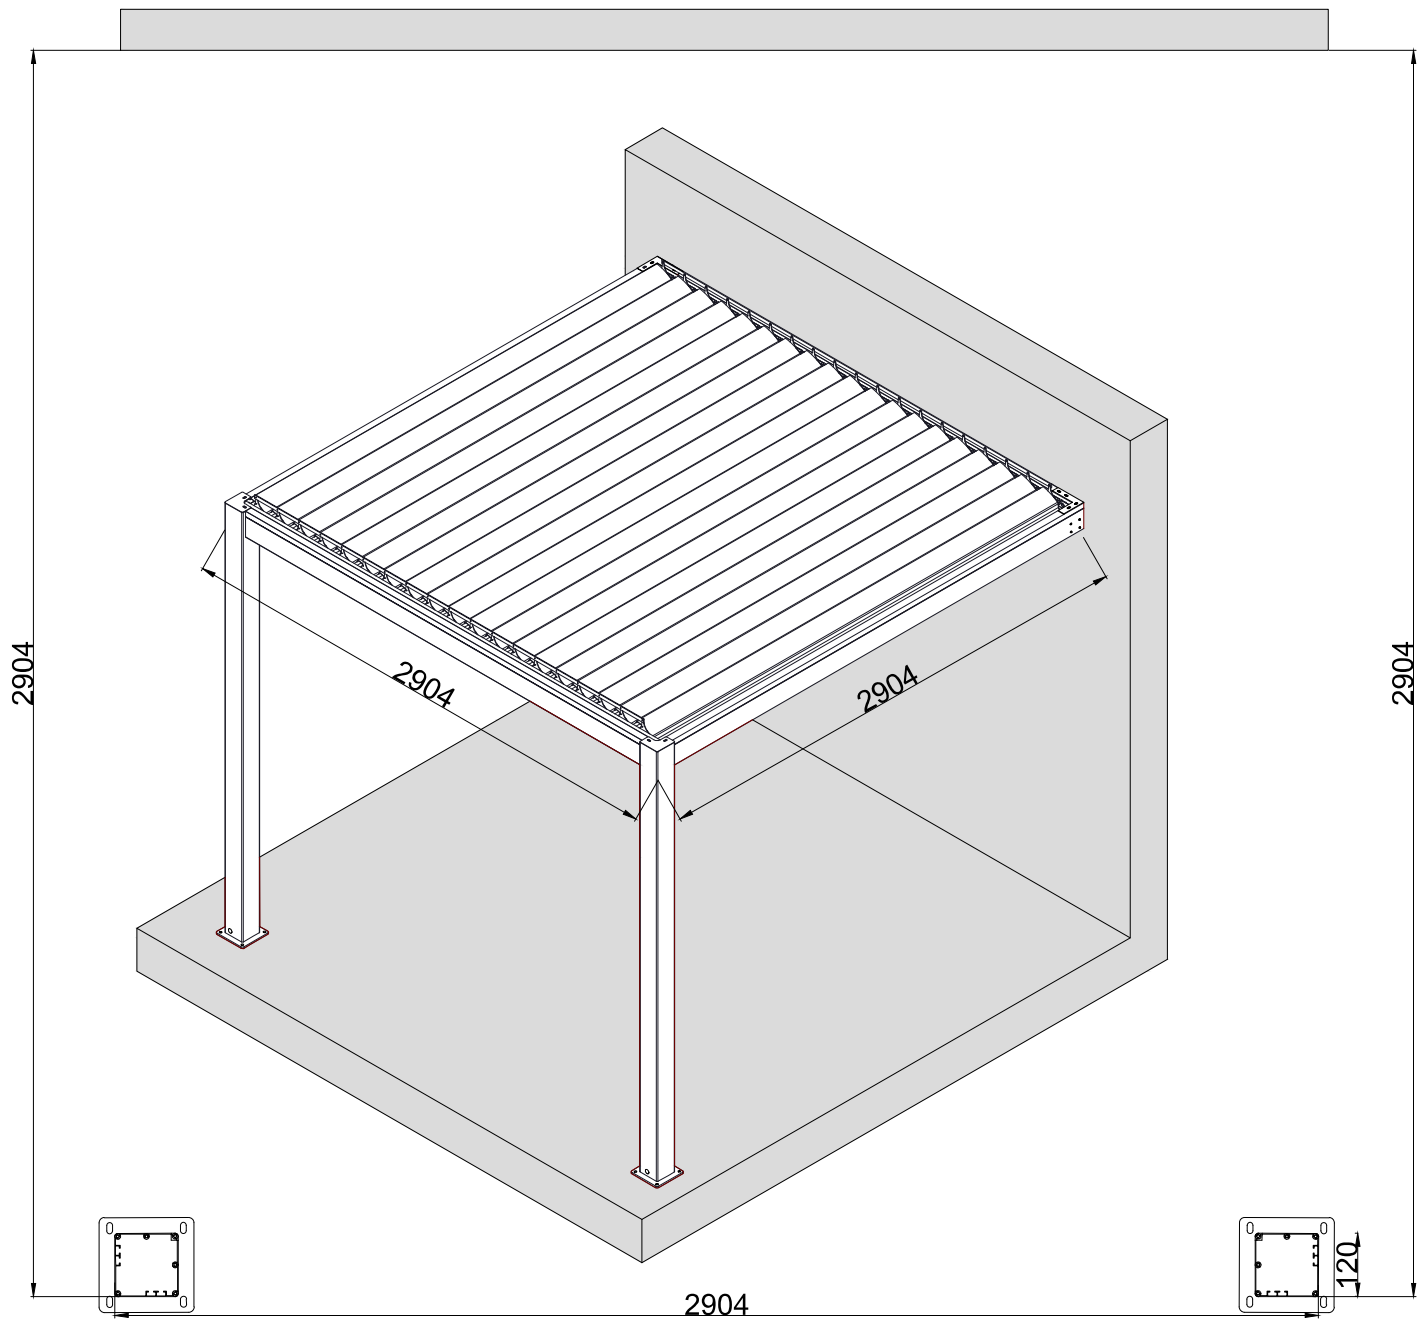

MOTORIZED 3×4M

	Item	Qty	Item	Qty	Item	Qty
Carton 1/6	3B-01	2	3B-11	2	3B-12	2
	3B-13	2	3B-14	1	3B-15	1
	3B-18	1	3B-19	15+	3B-20	54+
	3B-21	8	3B-23	28+	3B-24	1
	3B-35	2	3B-36	8	3B-38	6
	3B-39	14+	3B-40	2	3B-41	2
	3B-42	8	3B-30	1	3B-31	1
	3B-48	27+	3B-49	26+	3B-50	1
	3B-51	216+	3B-22	12+		
Carton 2/6	3B-02	1	3B-03	1	3B-04	1
	3B-05 /A/B	4	3B-08	2	3B-09	2
	3B-34	1	3B-29	2		
Carton 3/6	3B-06	7				
Carton 4/6	3B-06	7				
Carton 5/6	3B-06	7				
Carton 6/6	3B-06	6	3B-04	1		

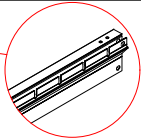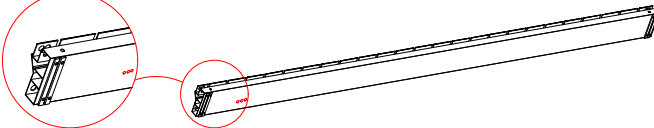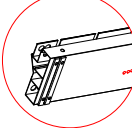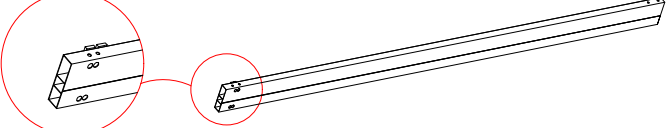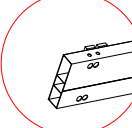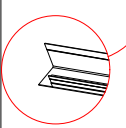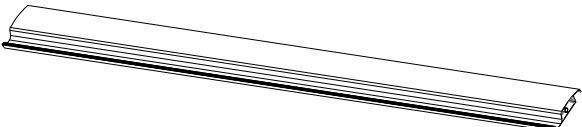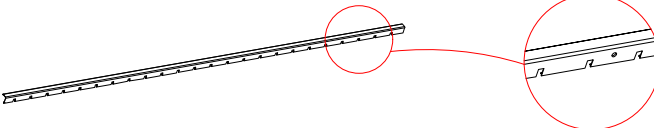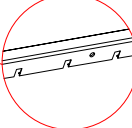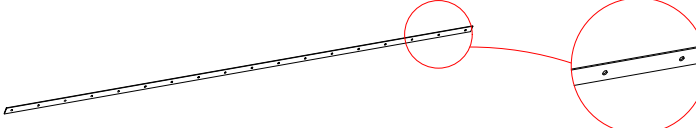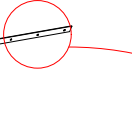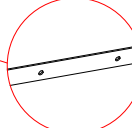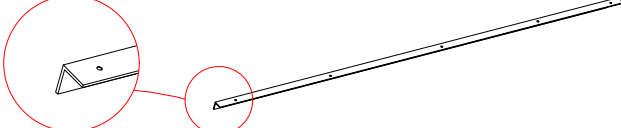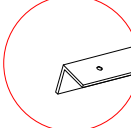

Item	Drawings	Qty
3B-01	 	2
3B-02	  	1
3B-03	  	1
3B-04	  	2
3B-05	  	2
3B-05A	  	1
3B-05B	  	1
3B-06	 	27
3B-08	  	2
3B-09	  	2
3B-34	  	1
3B-29	  	2






Item	Drawings	Qty
3B-11		2
3B-12		2
3B-13		2
3B-14		1
3B-15	 M8*20 lock nut	1
3B-18		1
3B-19	 M8*20	15+
3B-20		54+
3B-21	 M10*80	8
3B-22		12+
3B-23	 M4.2*19	28+
3B-24		1
3B-35		2

Item	Drawings	Qty
3B-36		8
3B-38	 M5.5*25	6
3B-40		2
3B-41		2
3B-42	 M10*20	8
3B-39	 M8*60	14+
3B-30		1
3B-31		1
3B-48		27+
3B-49		26+
3B-50		1
3B-51	 M4.2*25	216+












MOTORIZED 3×4M

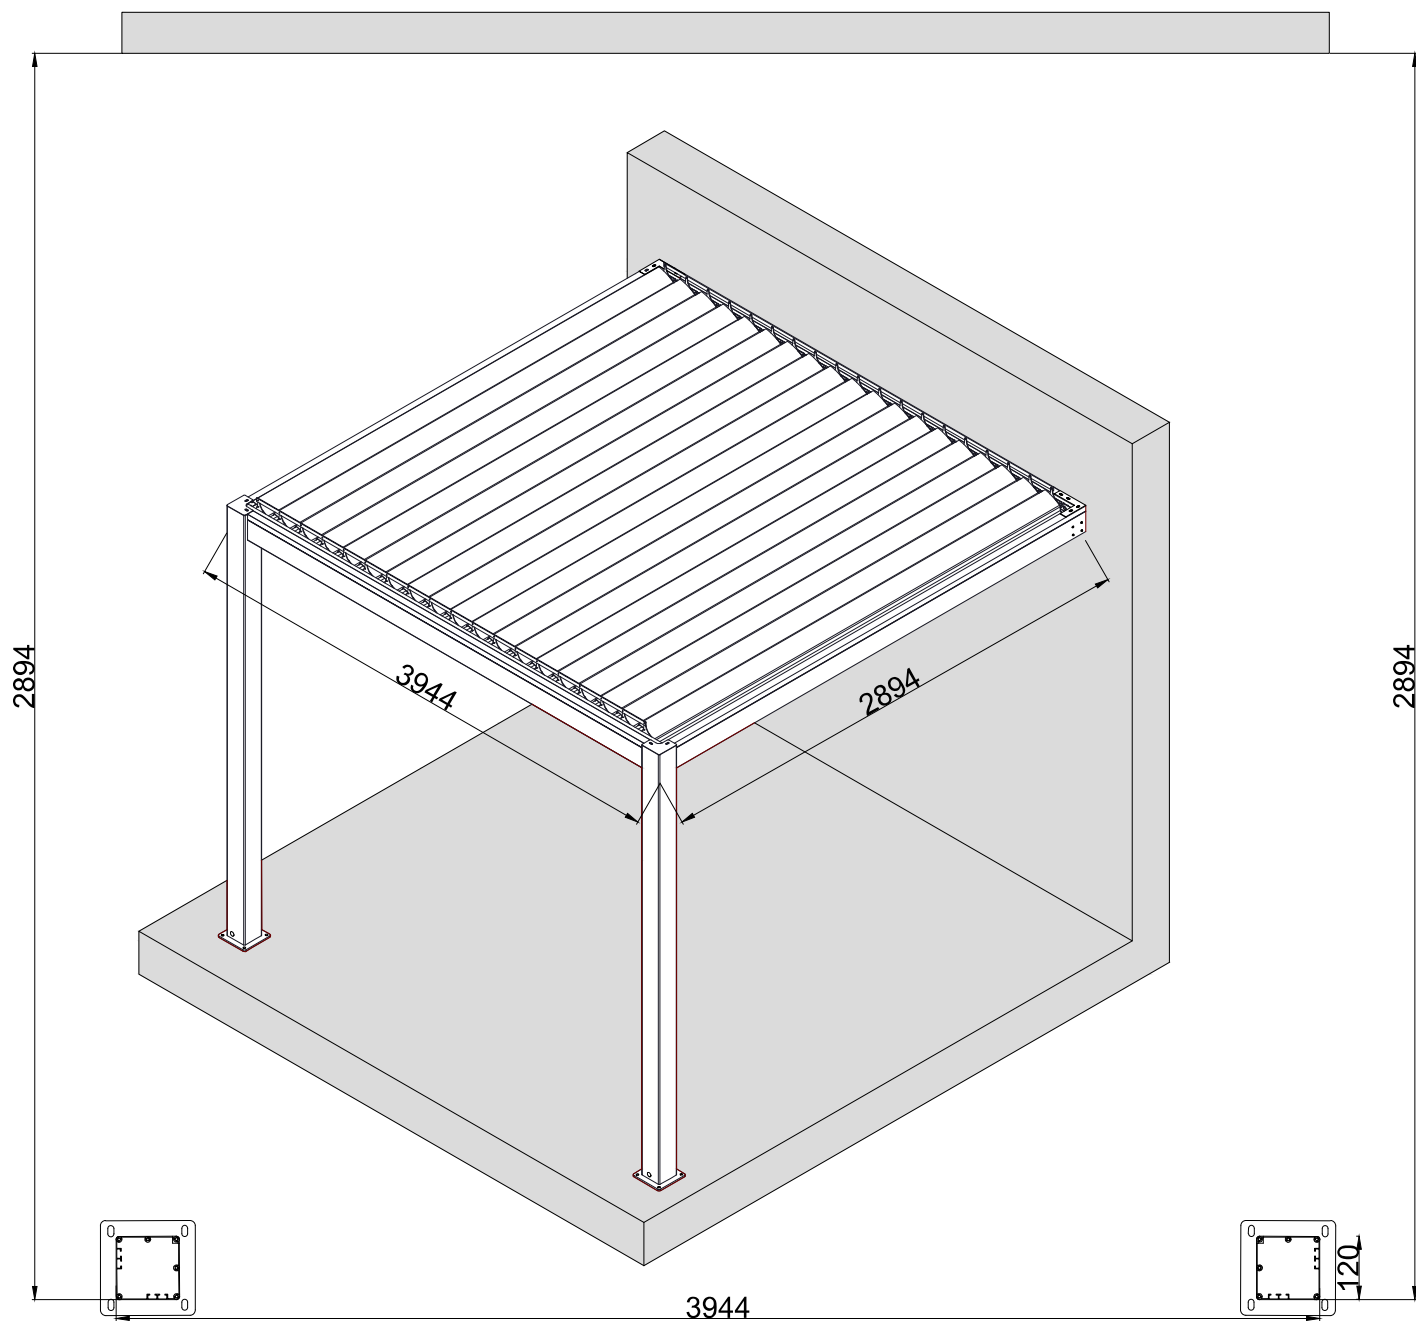

MOTORIZED 4x4M

	Item	Qty	Item	Qty	Item	Qty
Carton 1/6	3B-01	2	3B-11	2	3B-12	2
	3B-13	2	3B-14	1	3B-15	1
	3B-18	1	3B-19	15+	3B-20	54+
	3B-21	8	3B-23	30+	3B-24	1
	3B-35	2	3B-36	8	3B-38	6
	3B-39	14+	3B-40	2	3B-41	2
	3B-42	8	3B-30	1	3B-31	1
	3B-48	27+	3B-49	26+	3B-50	1
	3B-51	216+	3B-22	12+		
Carton 2/6	3B-02	1	3B-03	1	3B-04	2
	3B-05 /A/B	4	3B-08	2	3B-09	2
	3B-34	1	3B-29	2		
Carton 3/6	3B-06	7				
Carton 4/6	3B-06	7				
Carton 5/6	3B-06	7				
Carton 6/6	3B-06	6				

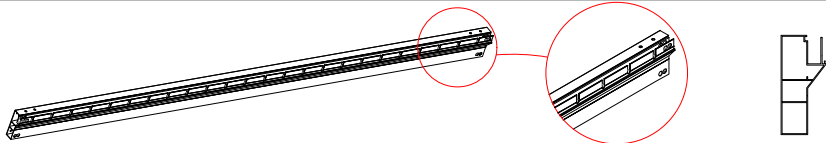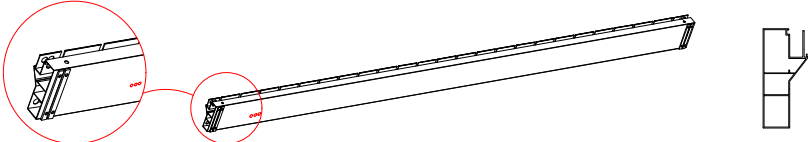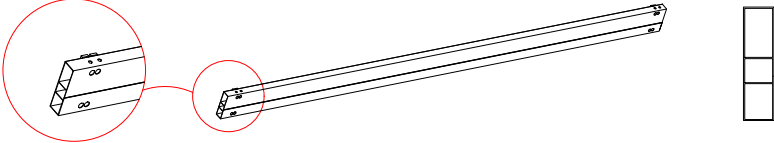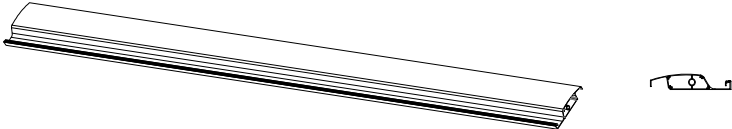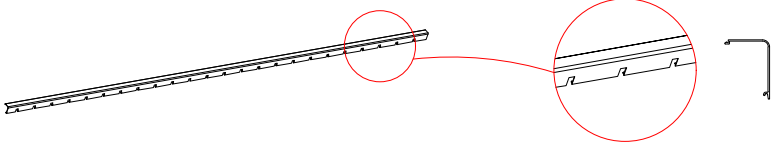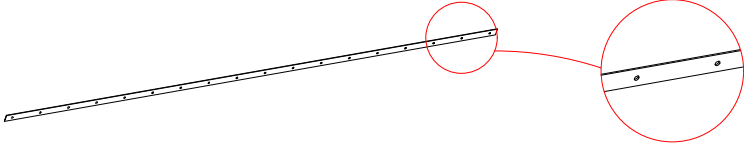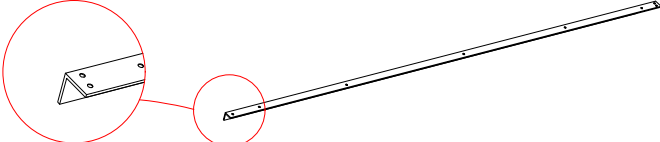

Item	Drawings	Qty
3B-01		2
3B-02		1
3B-03		1
3B-04		2
3B-05		2
3B-05A		1
3B-05B		1
3B-06		27
3B-08		2
3B-09		2
3B-34		1
3B-29		2






Item	Drawings	Qty
3B-11		2
3B-12		2
3B-13		2
3B-14		1
3B-15	 M8*20 lock nut	1
3B-18		1
3B-19	 M8*20	15+
3B-20		54+
3B-21	 M10*80	8
3B-22		12+
3B-23	 M4.2*19	30+
3B-24		1
3B-35		2



Item	Drawings	Qty
3B-36		8
3B-38	 M5.5*25	6
3B-40		2
3B-41		2
3B-42	 M10*20	8
3B-39	 M8*60	14+
3B-30		1
3B-31		1
3B-48		27+
3B-49		26+
3B-50		1
3B-51	 M4.2*25	216+



MOTORIZED 4×4M



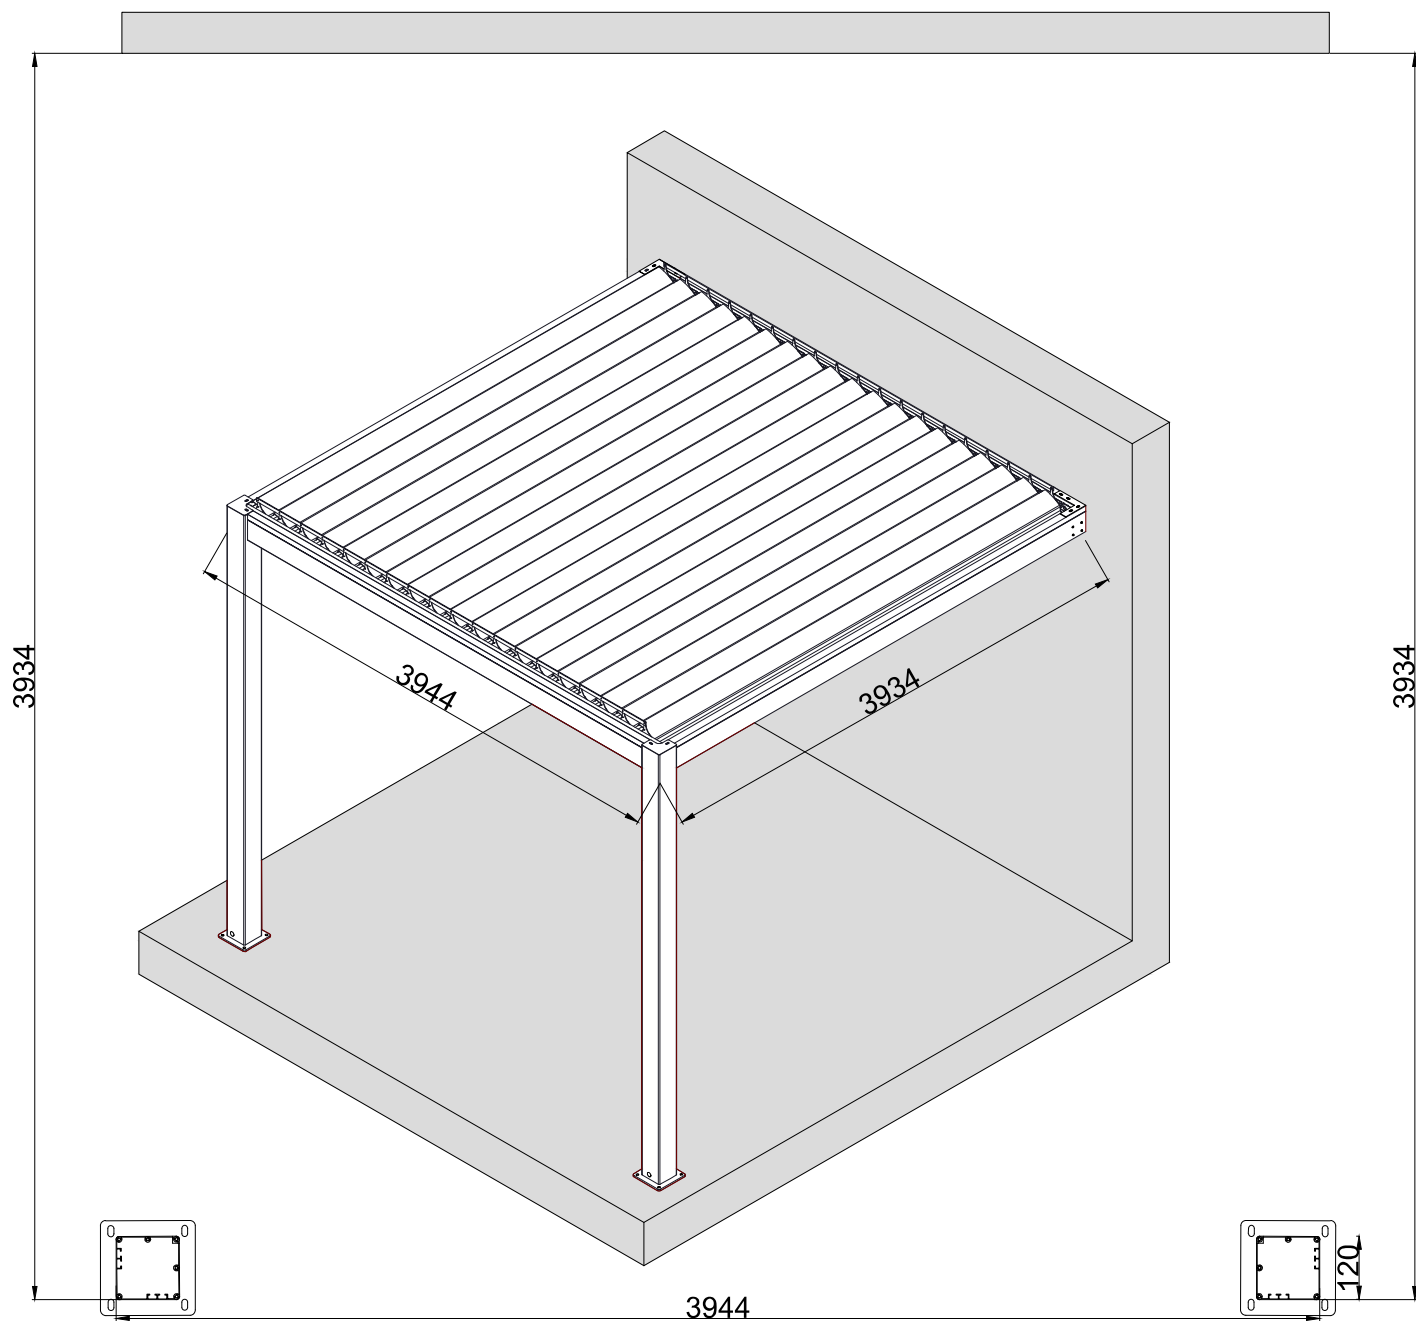


a

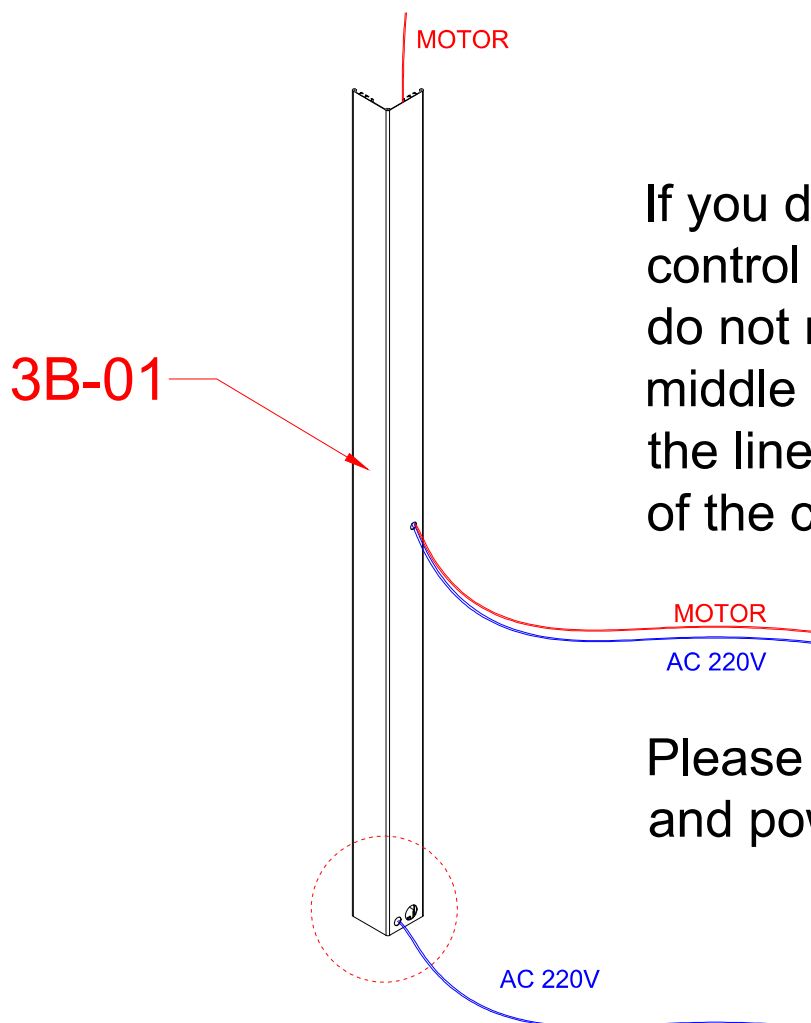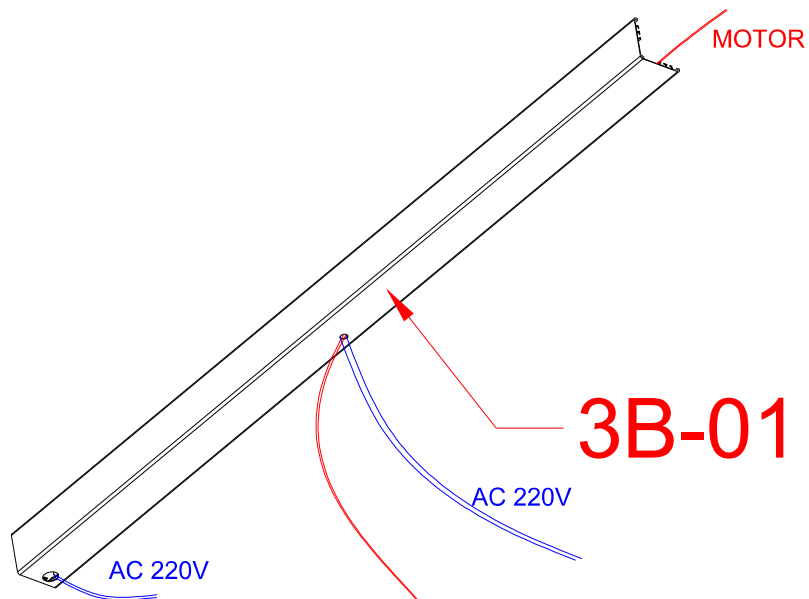




If you do not want to place the control box on the column, you do not need to drill holes in the middle of the column and thread the line directly from the bottom of the column

Please bring your own cable and power cord and plug

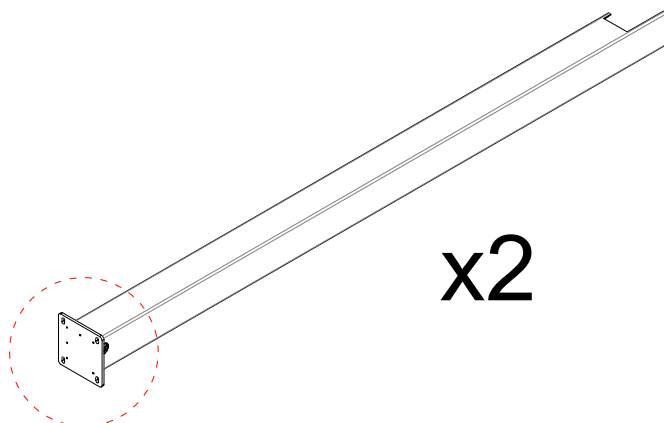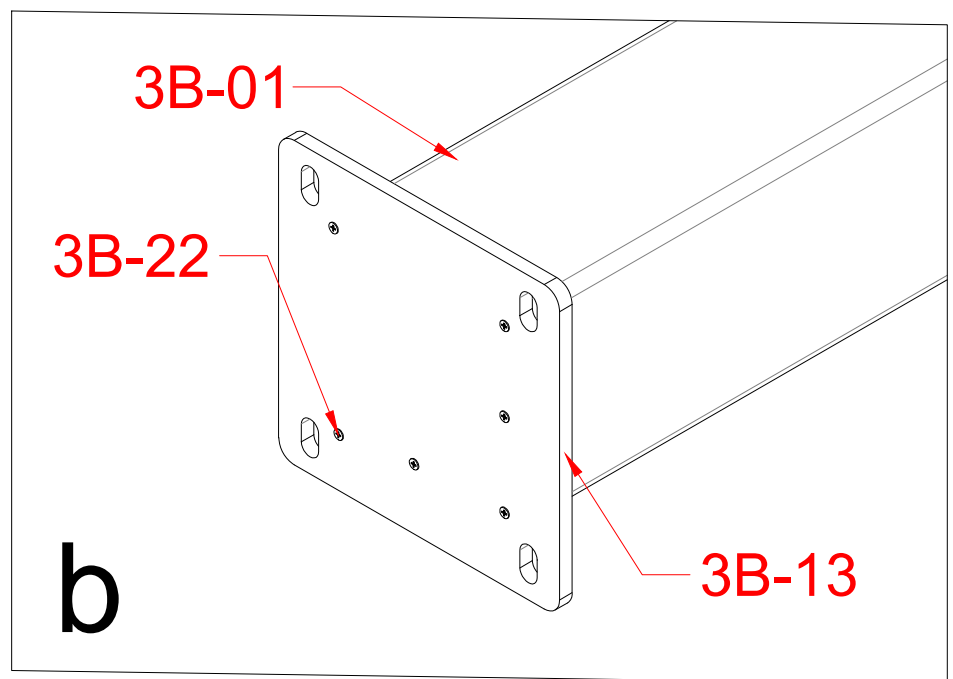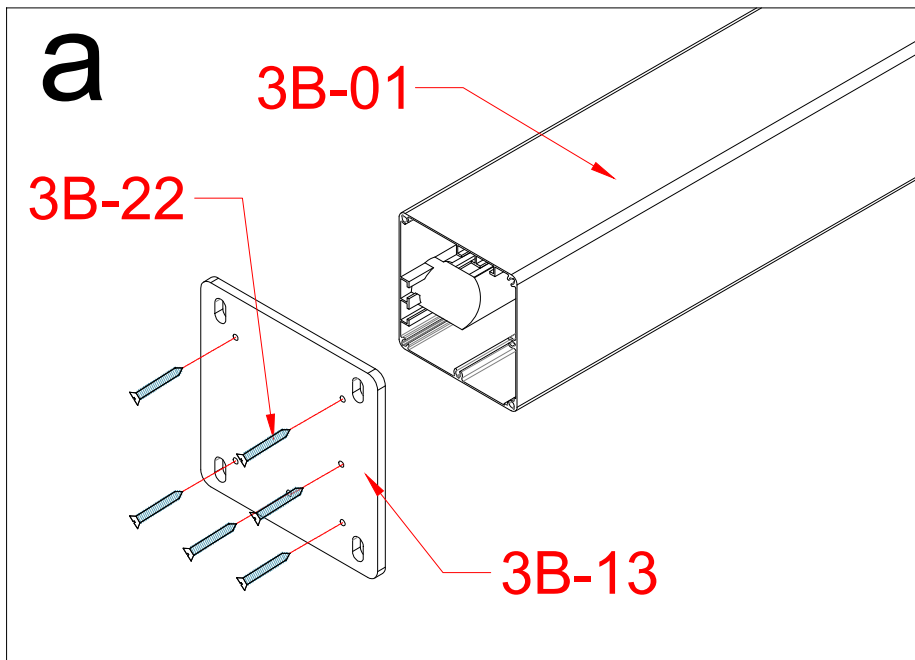






3B-01	 	2
3B-13		2
3B-22		12




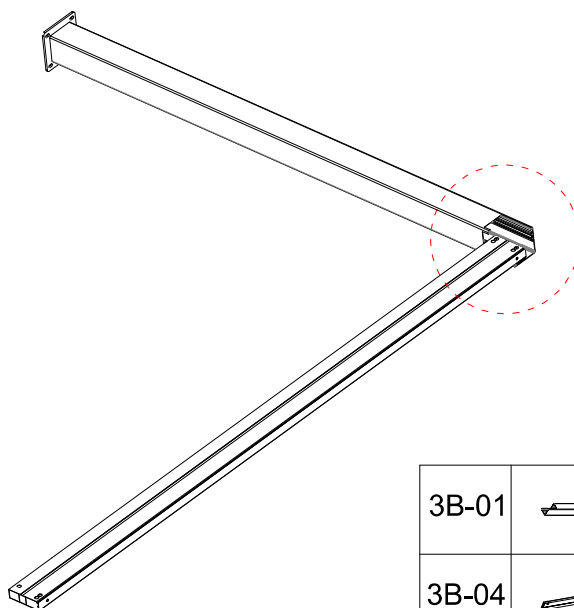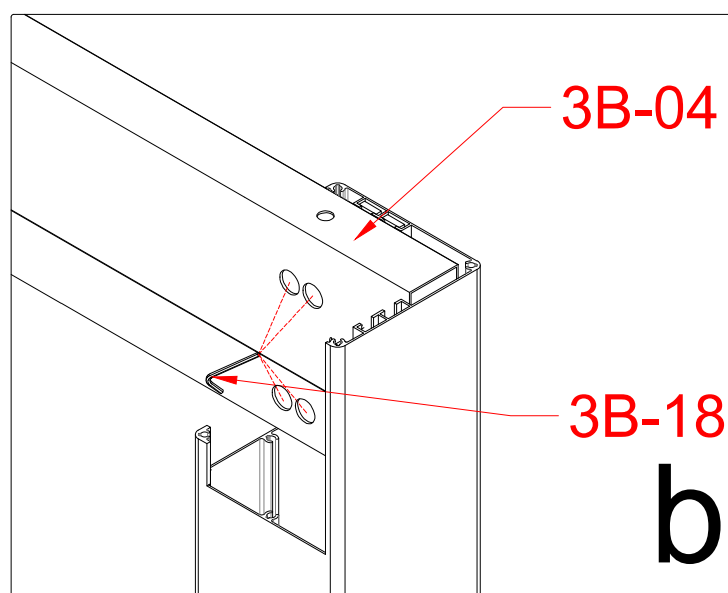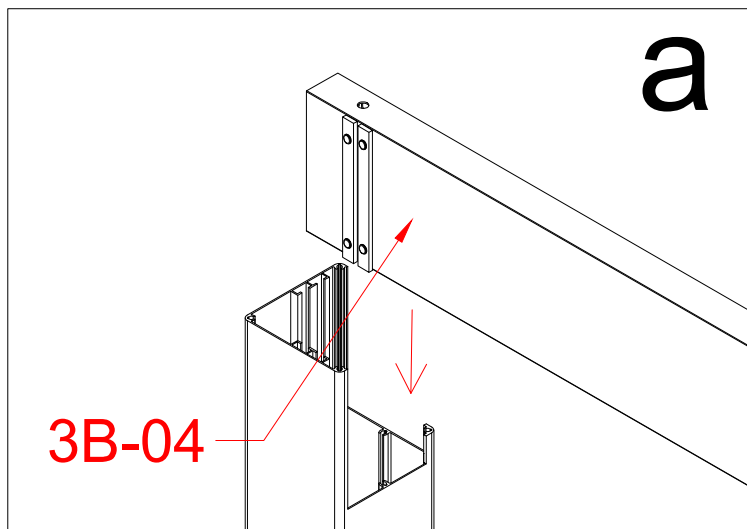





3B-01		2
3B-04		2



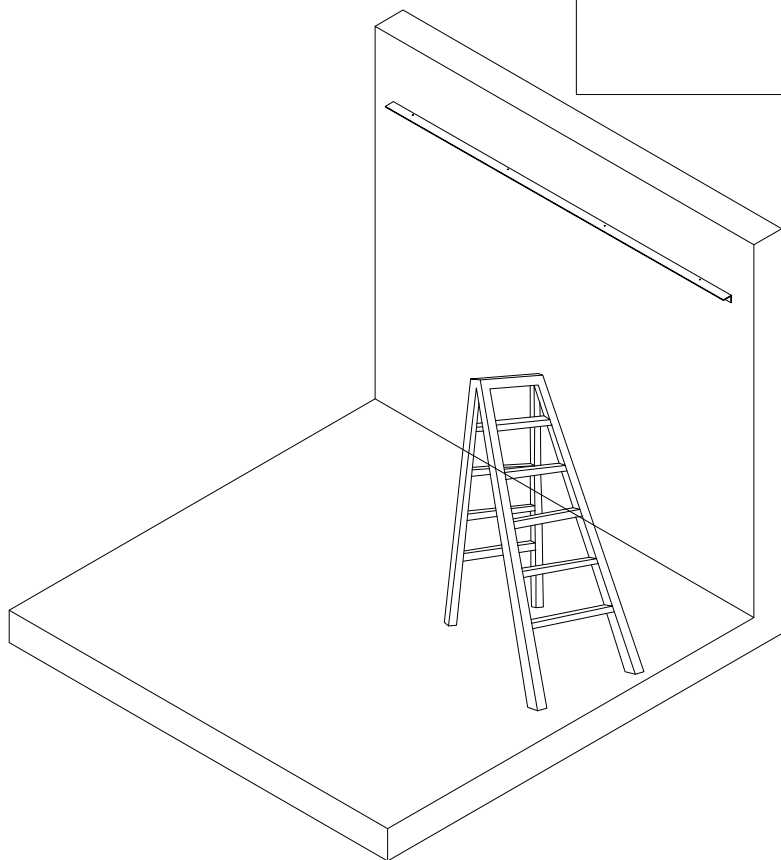
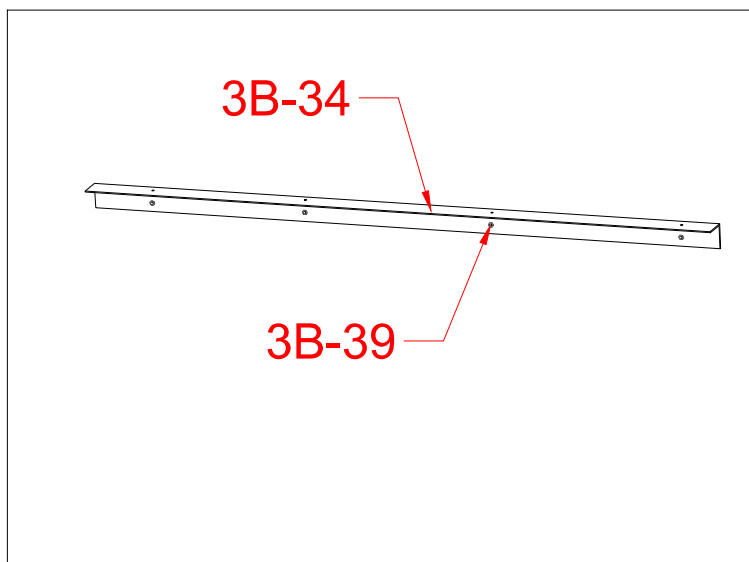
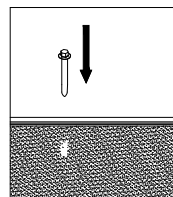
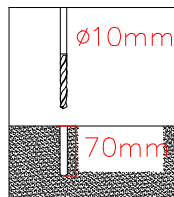
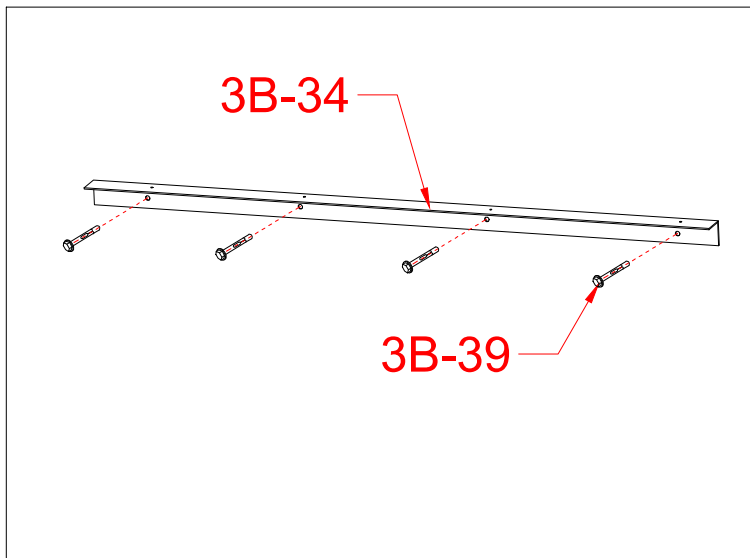



3B-34		1
3B-39		X



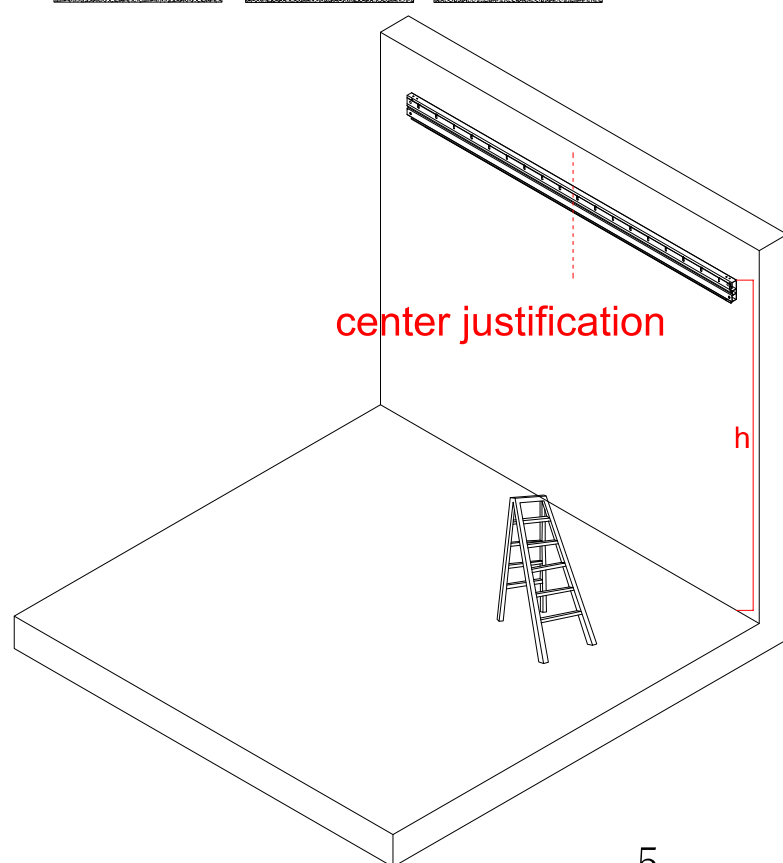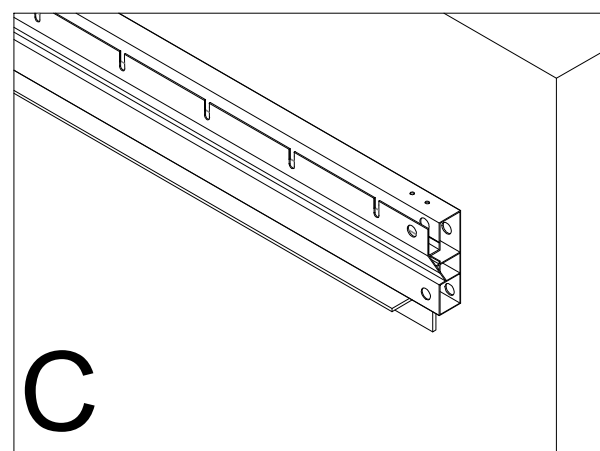
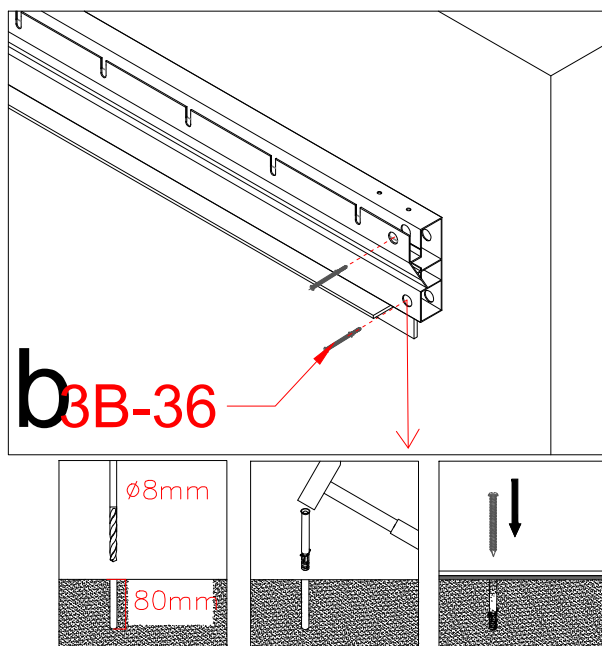
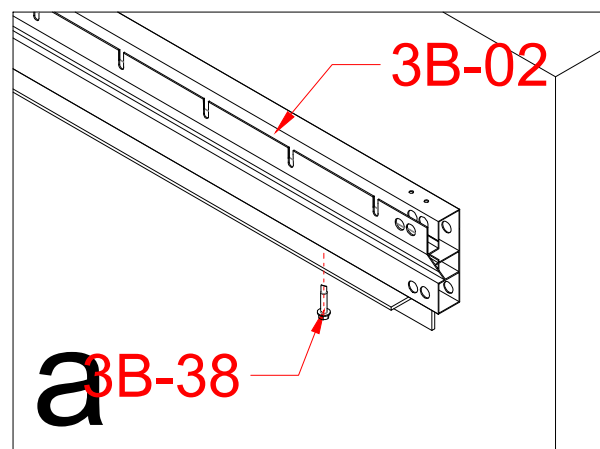


3B-02			1
3B-38			X
3B-36			4

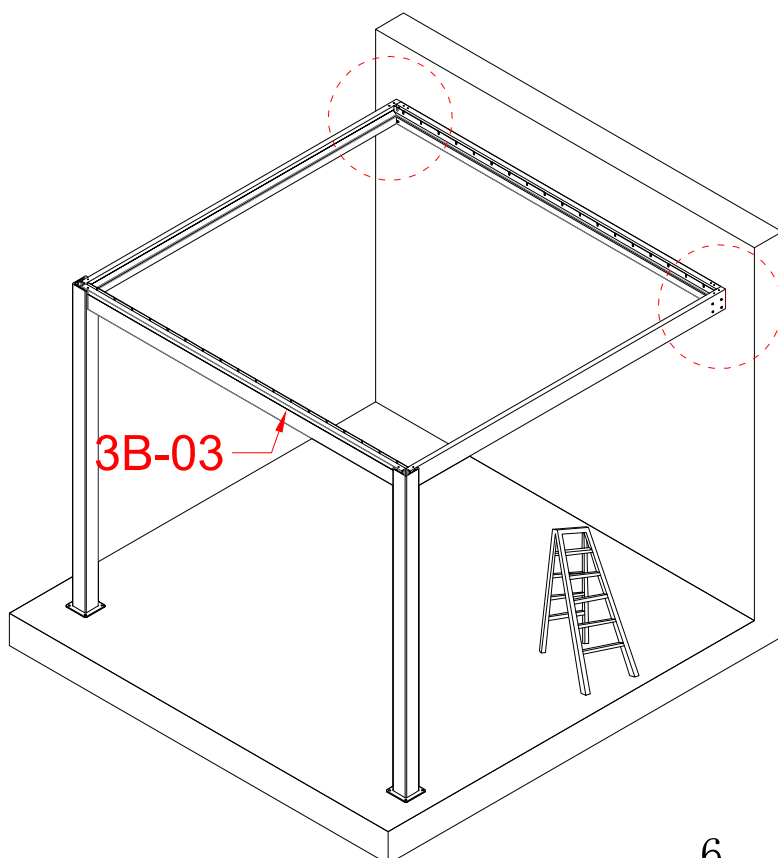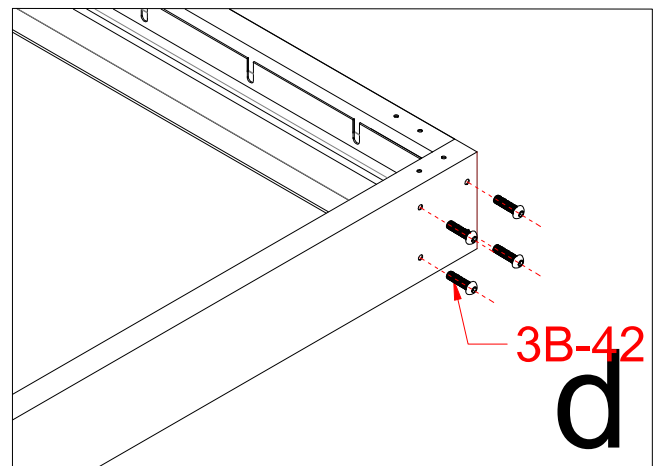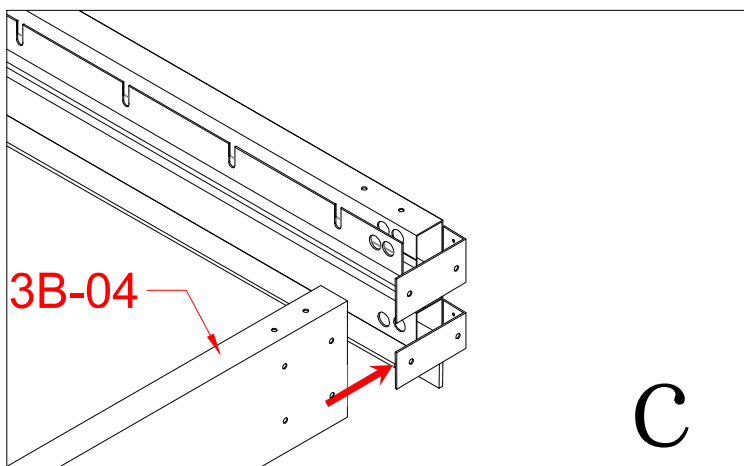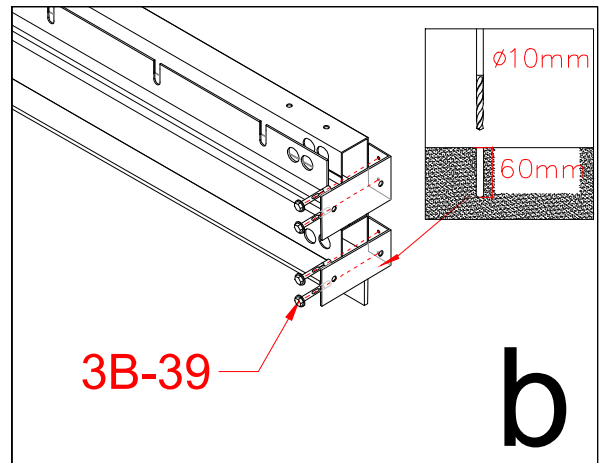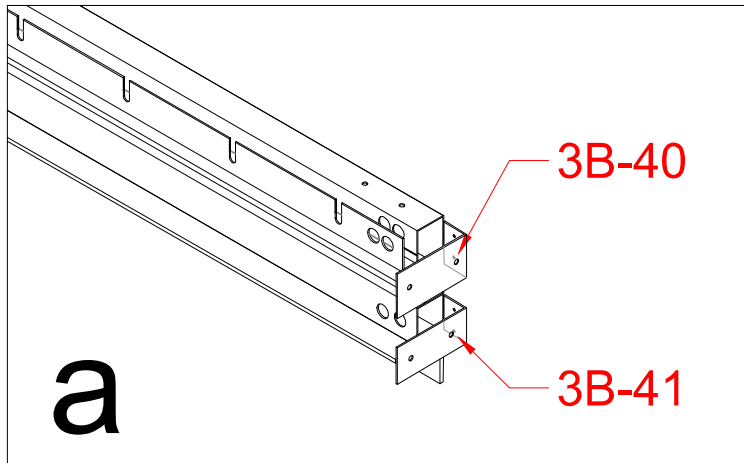

3B-42	 M10*20	8
3B-40		2
3B-41		2
3B-04		2
3B-39		8






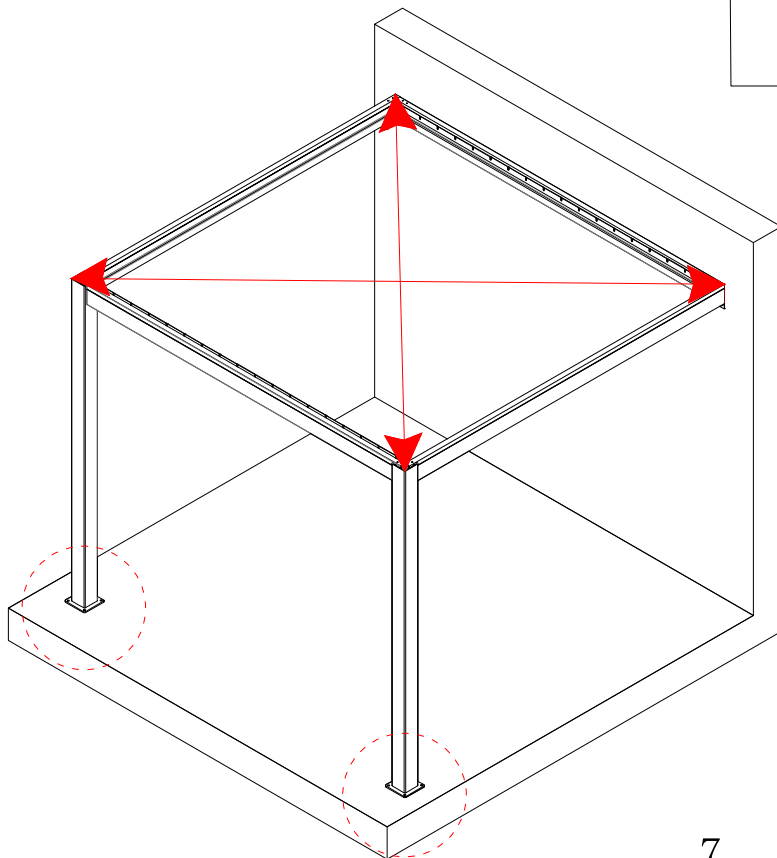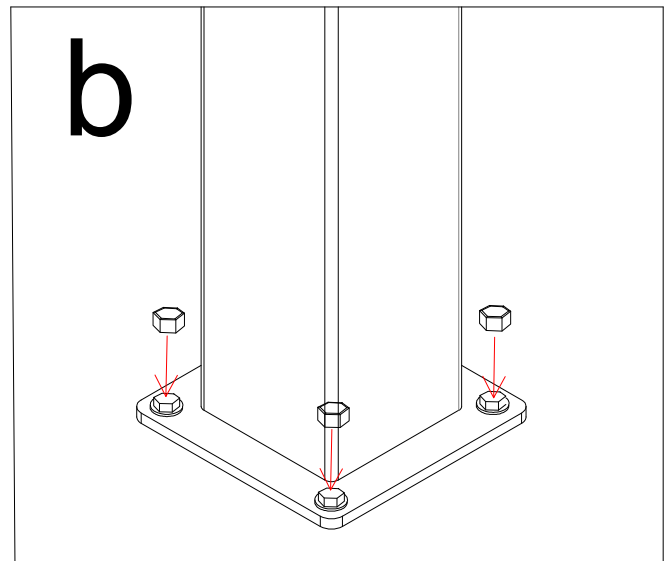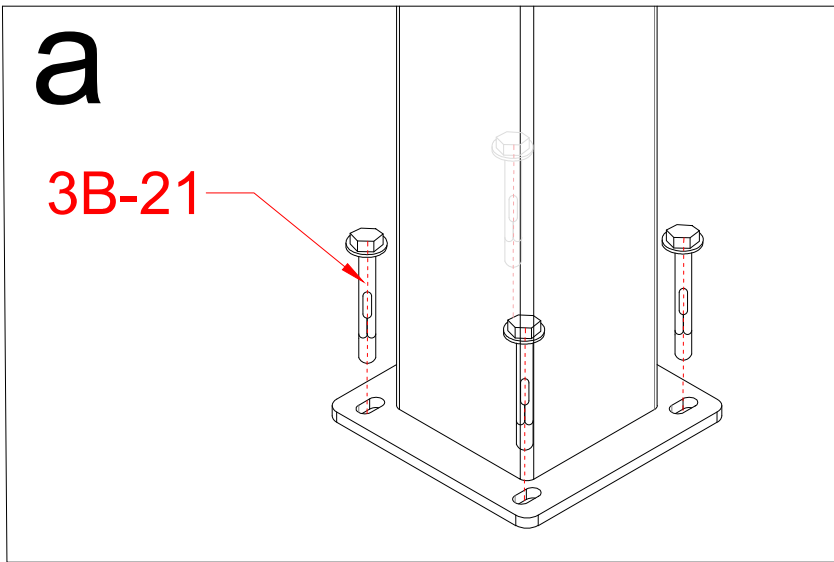





Pls measure the diagonal size and make sure the diagonal size keeps same before screw 3B-21 mounted. If not, pls adjust it to same size.

3B-21		8
-------	--	---



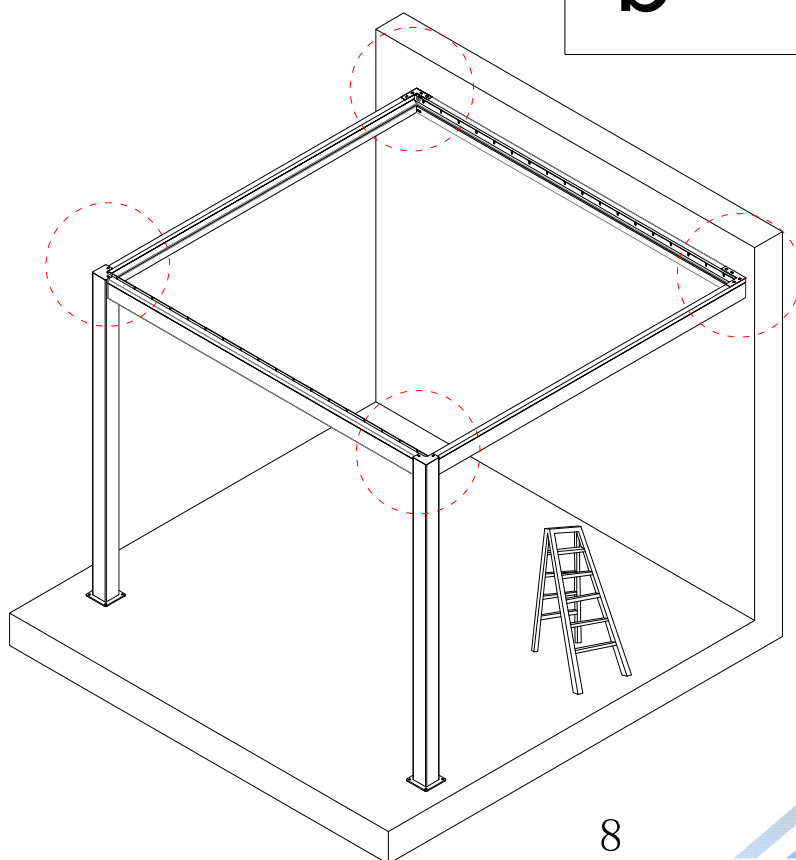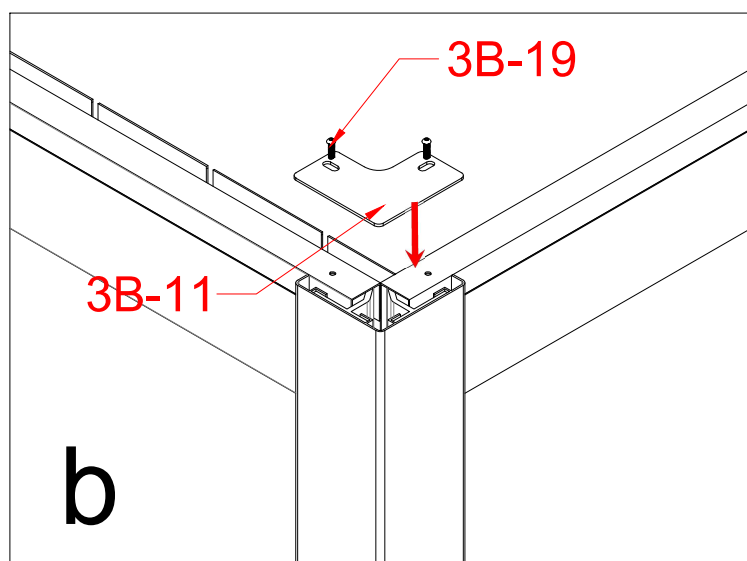
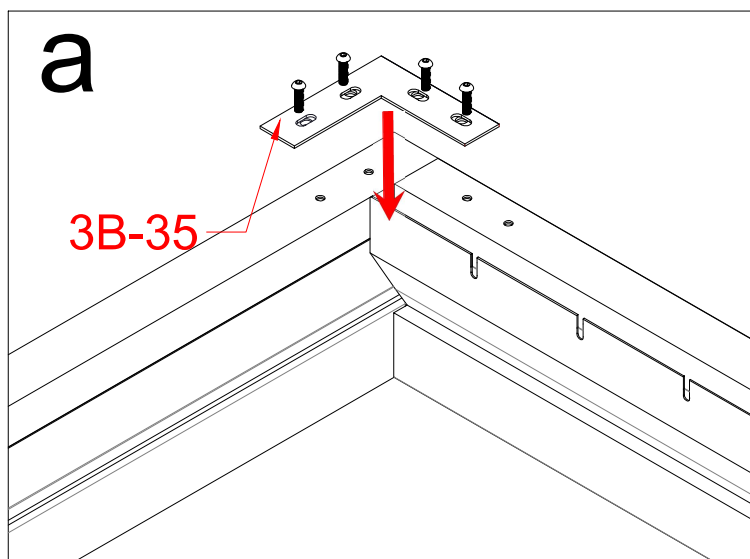


3B-35		2
3B-11		2
3B-19		12

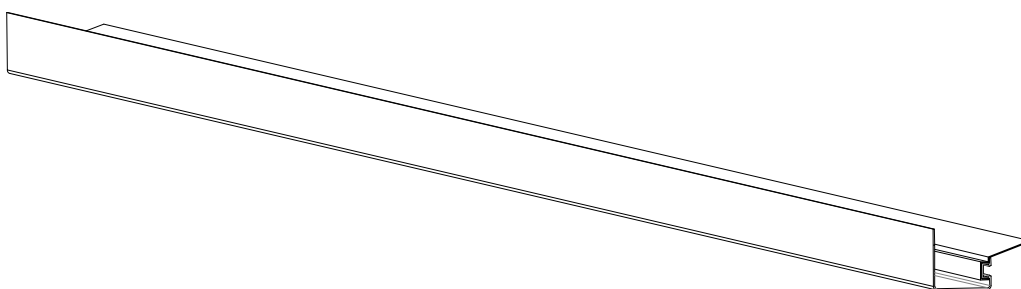
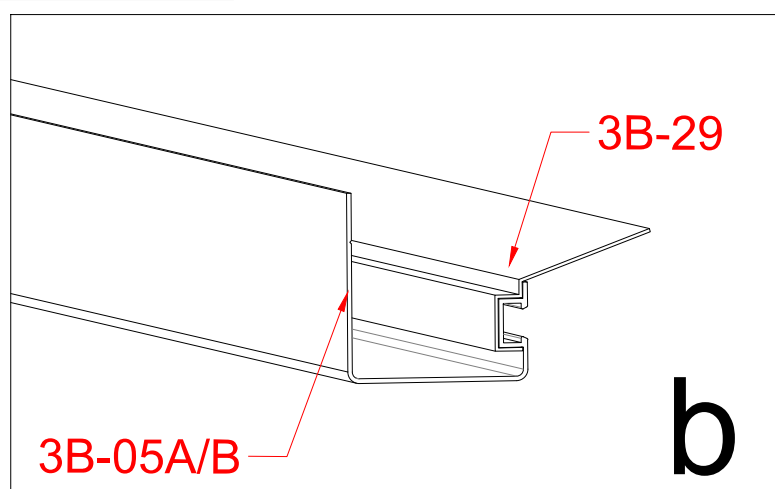
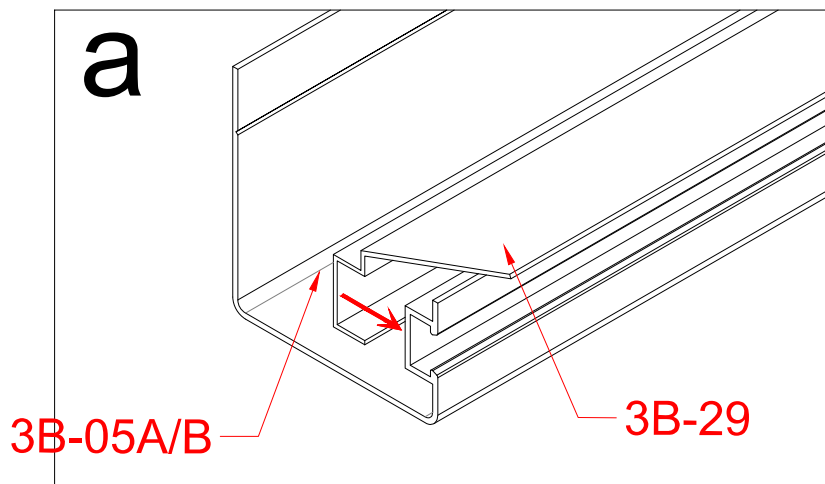


3B-05B		1
3B-05A		1
3B-29		2



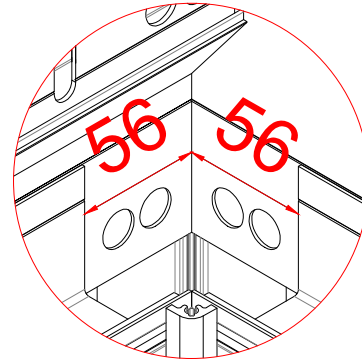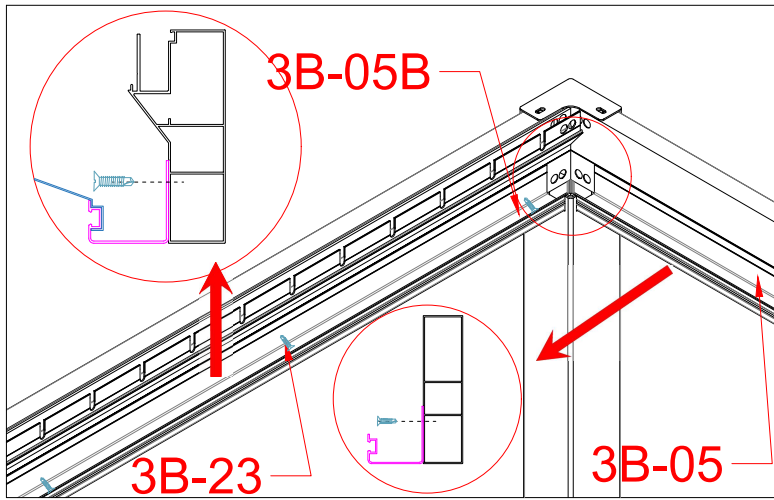




Warning:
Before installation, tear off the protective film of the tape on the back side of Gutter.

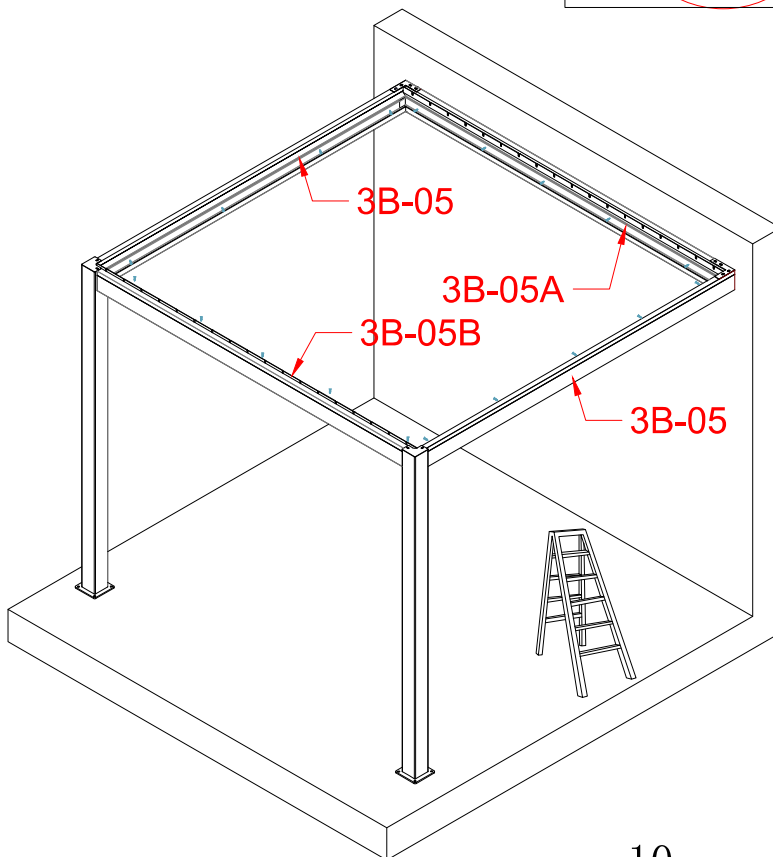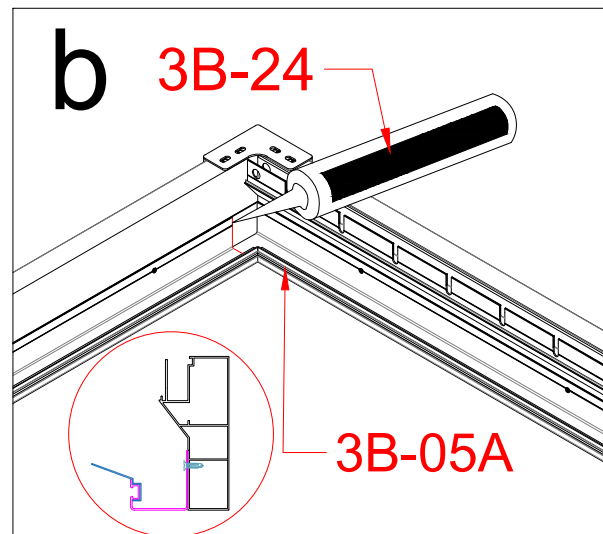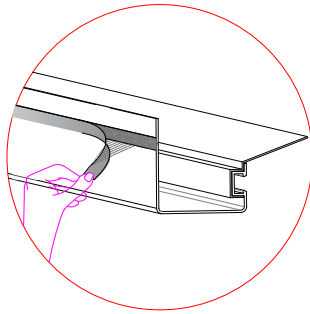

4screws/3m side
5screws/4m side




3B-24		1
3B-05		2
3B-05A		1
3B-05B		1
3B-23		X



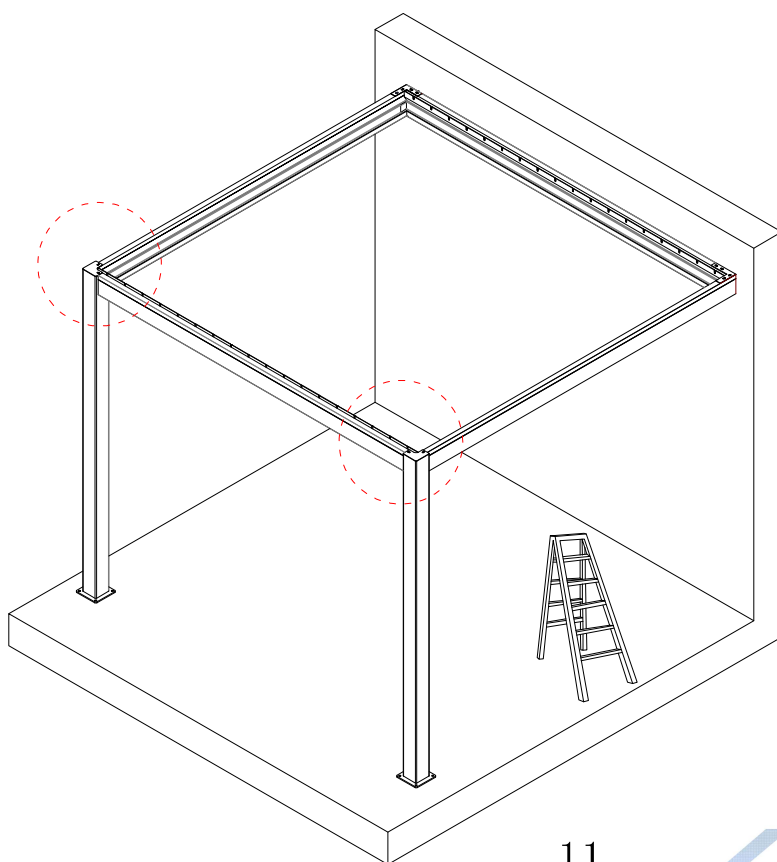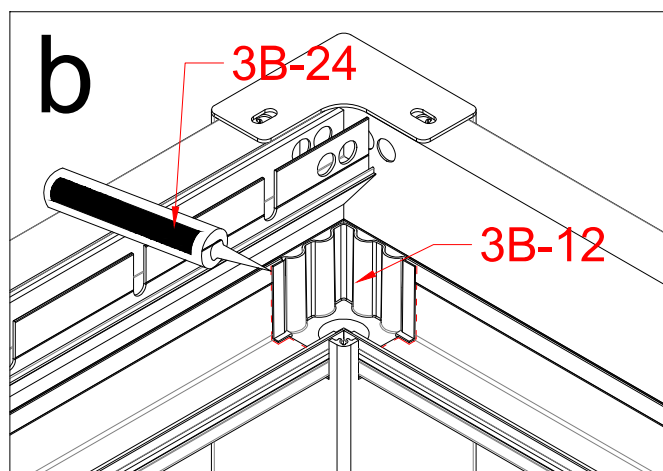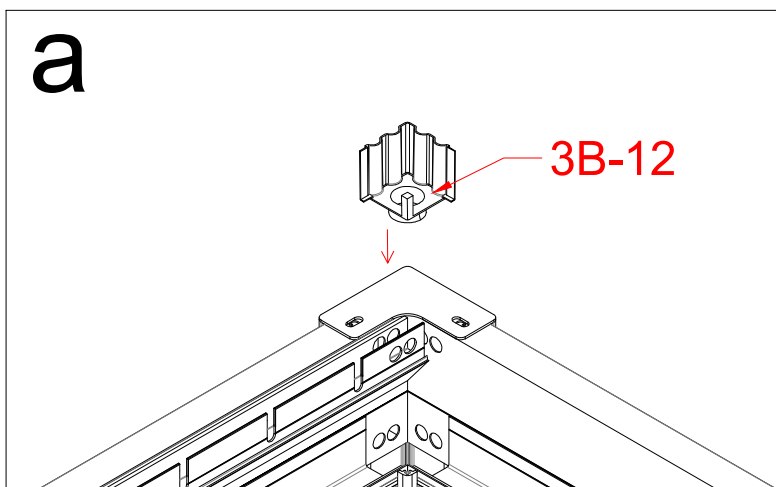

3B-24		1
3B-12		2








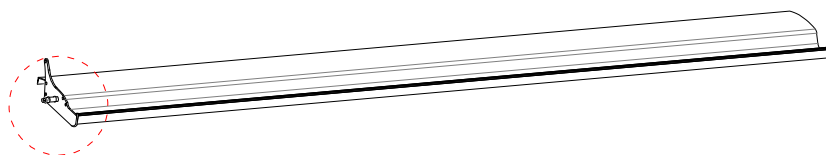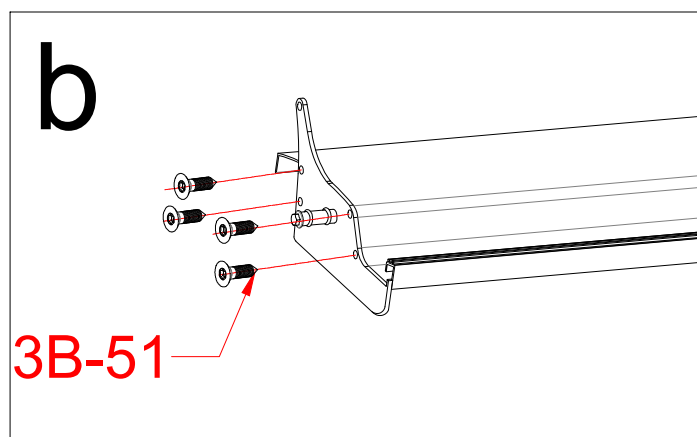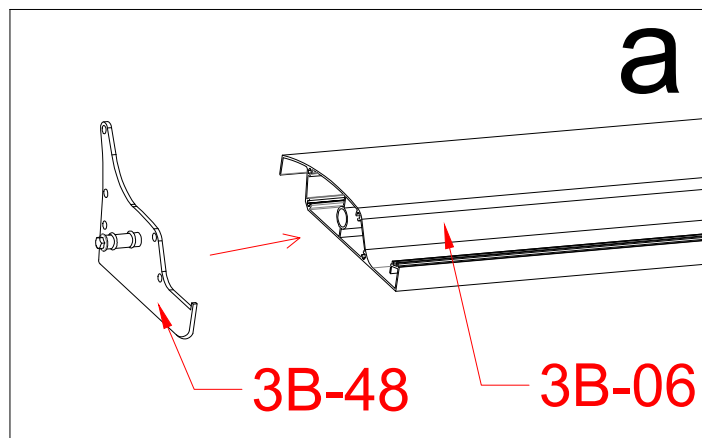

X


3B-51		x*4
3B-06	 	x
3B-48		x



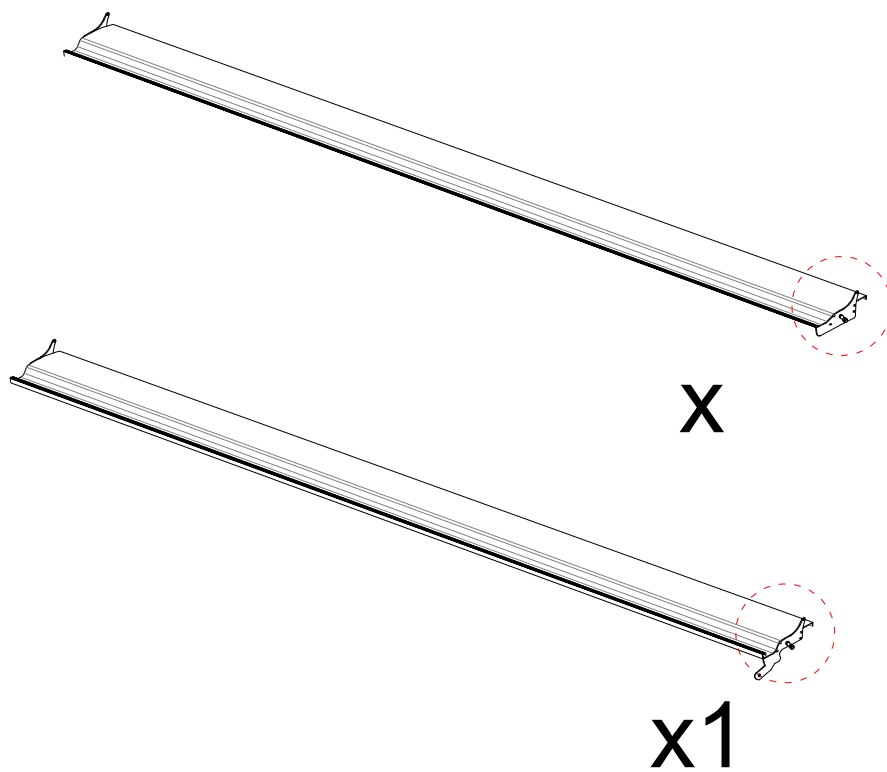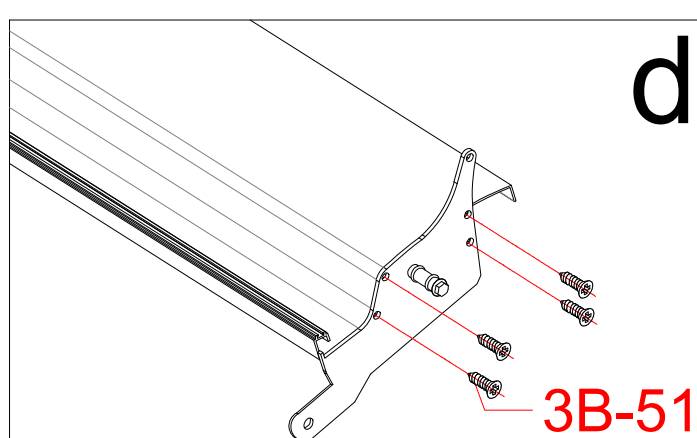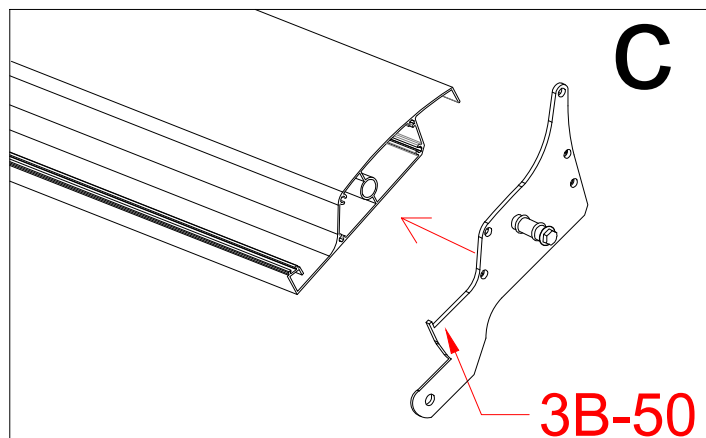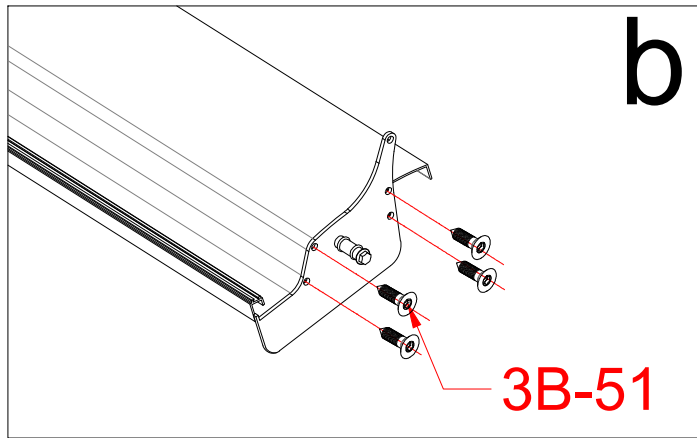
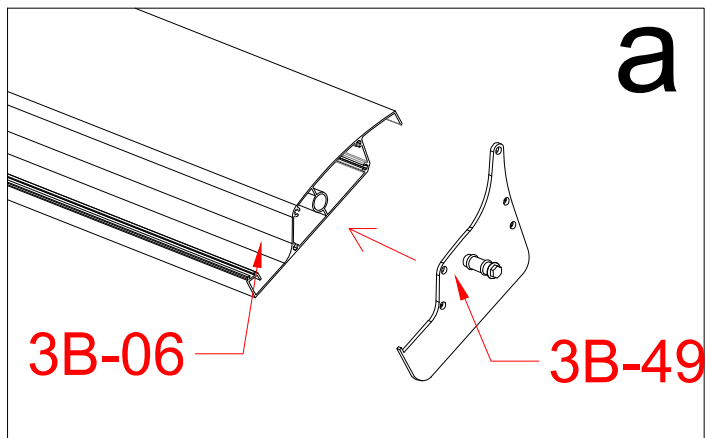


3B-49		x
3B-50		1
3B-51		x*4




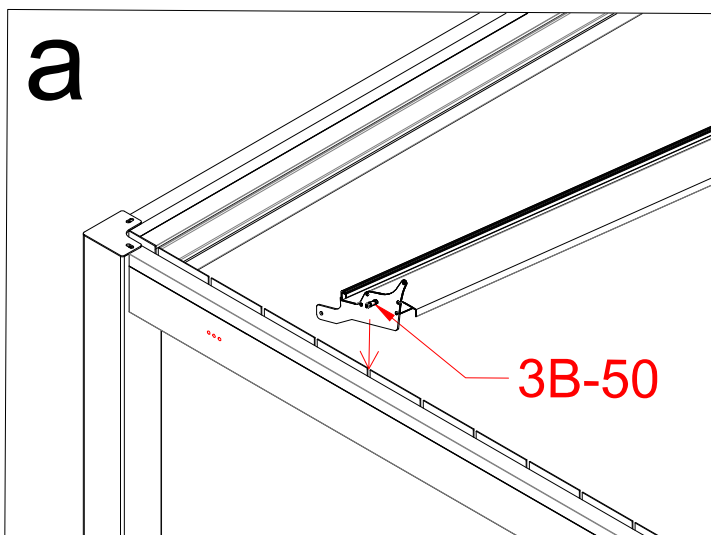


warning:
Bolts must be tightened

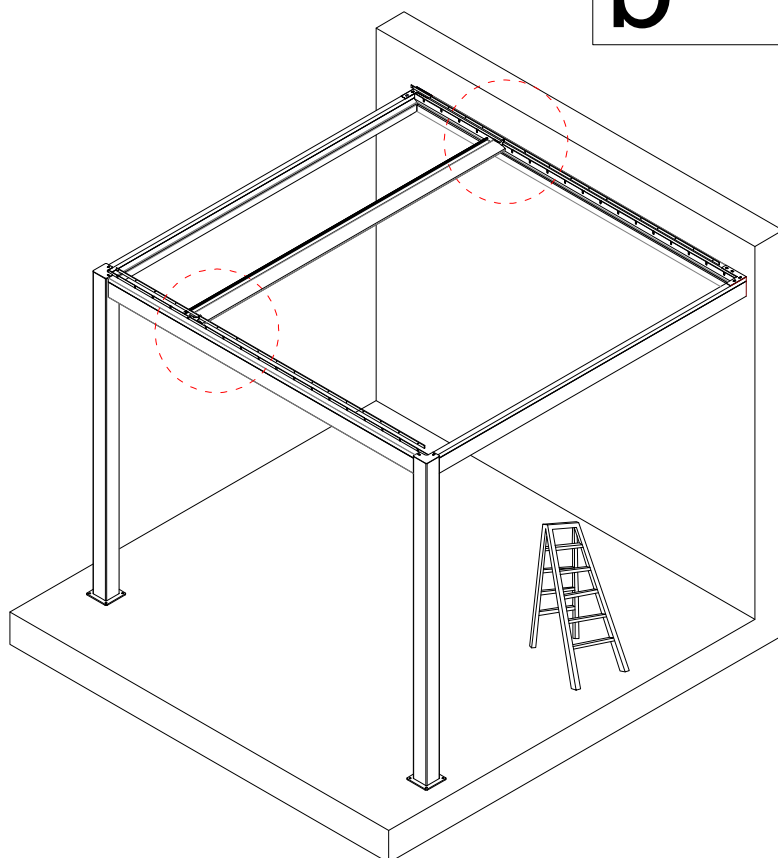
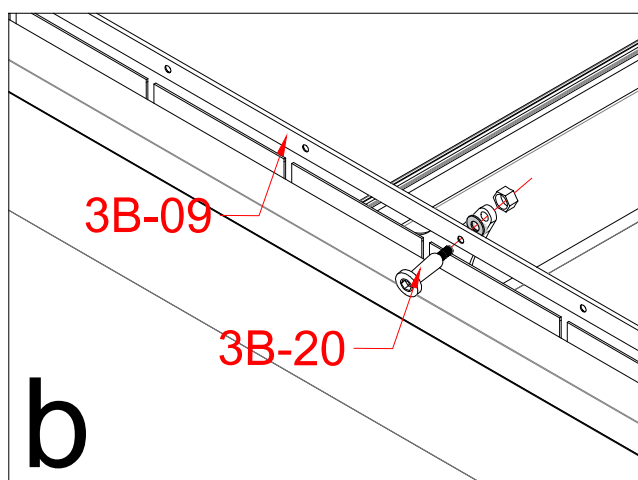


3B-09		2
3B-20		2
3B-06		1





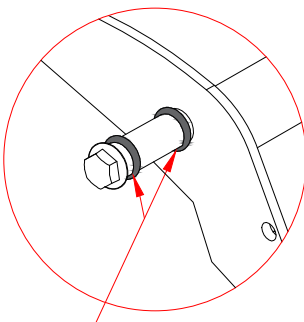
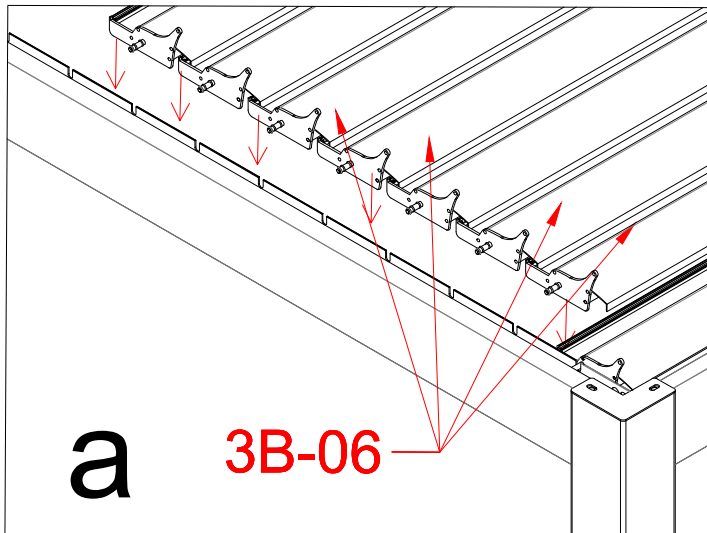


When installing louvers, first separate the two rubber gaskets and slide them to both ends of the circular shaft. Then, please ensure they are closed tightly before proceeding with the next steps of the installation.

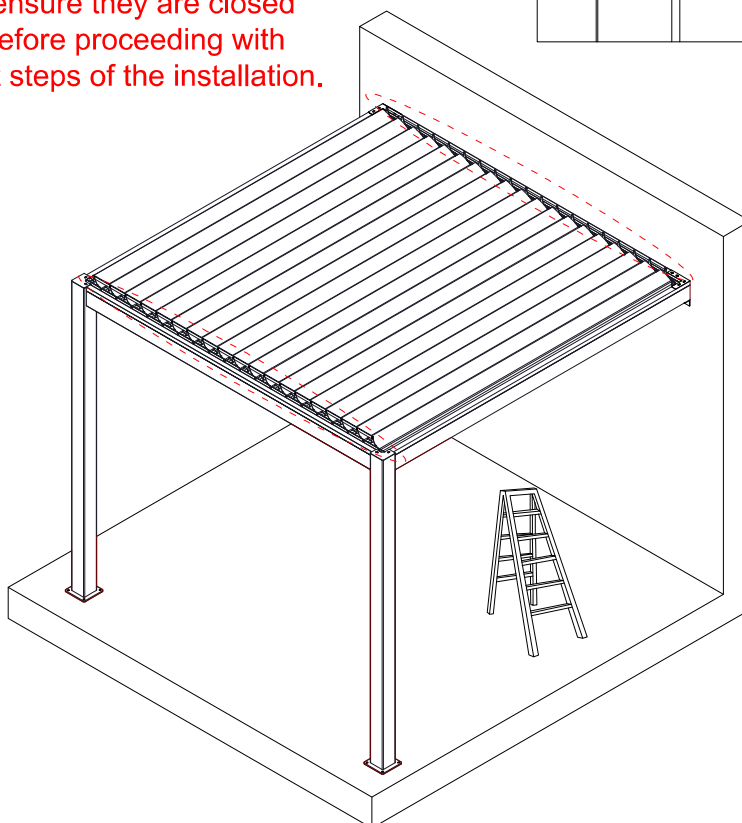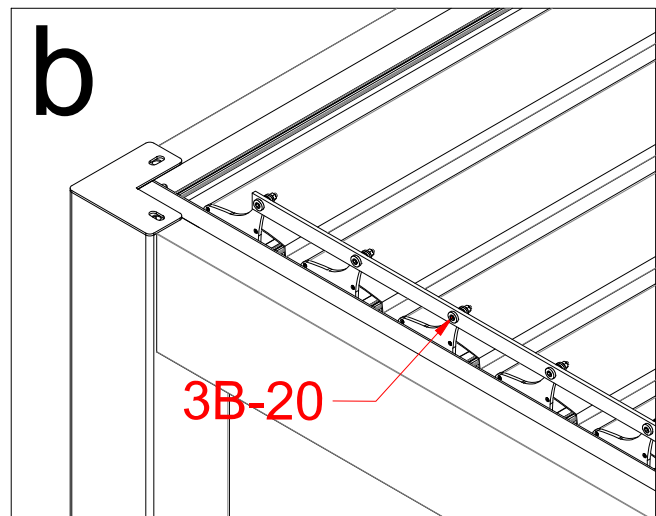




3B-20		x
3B-06		x



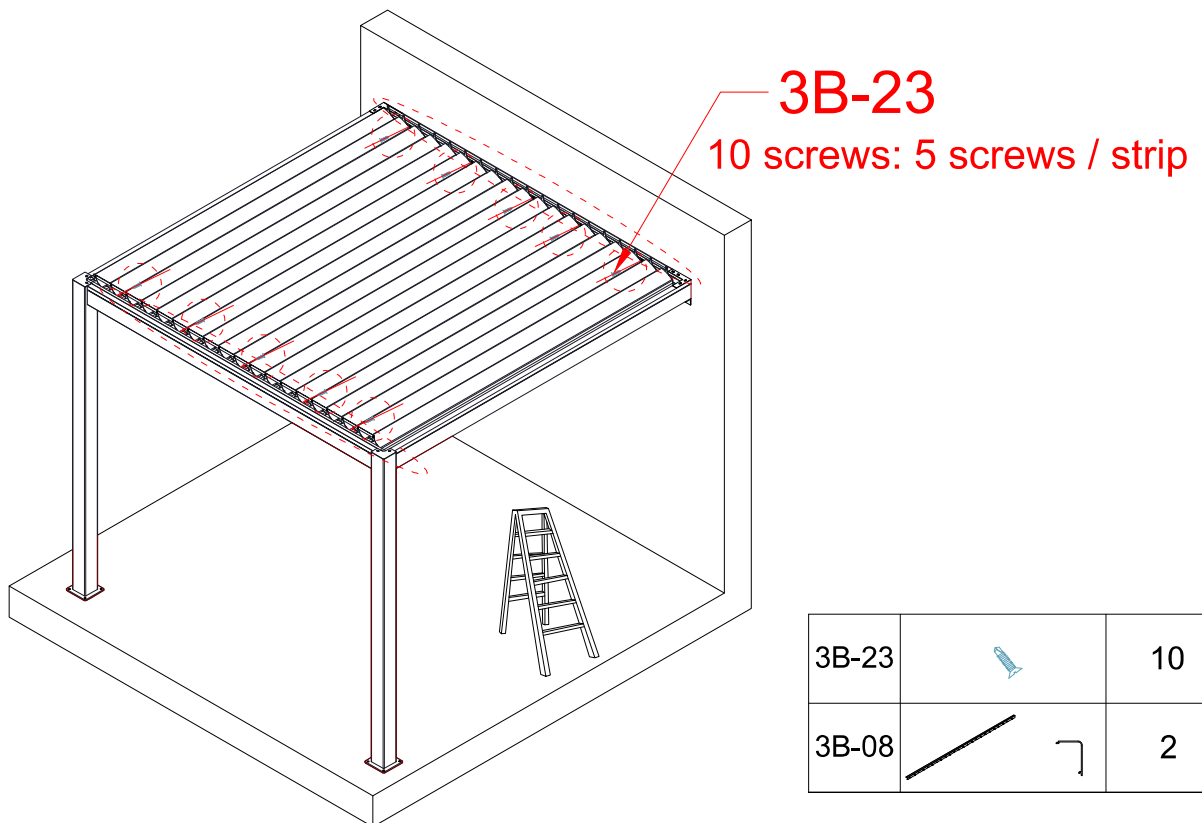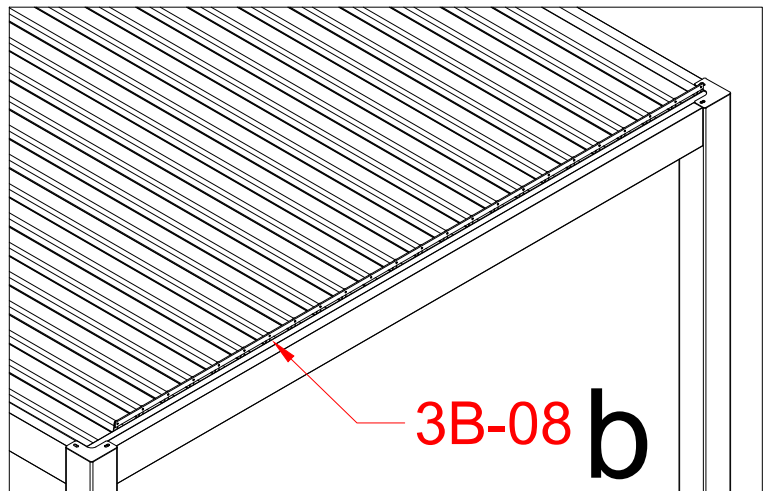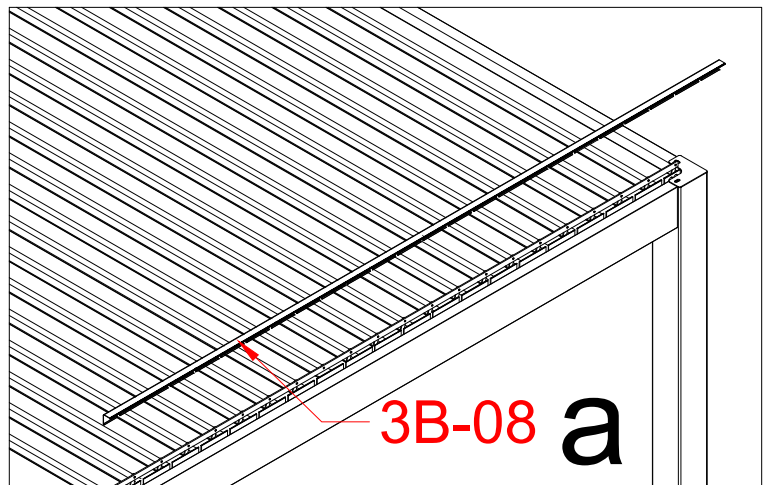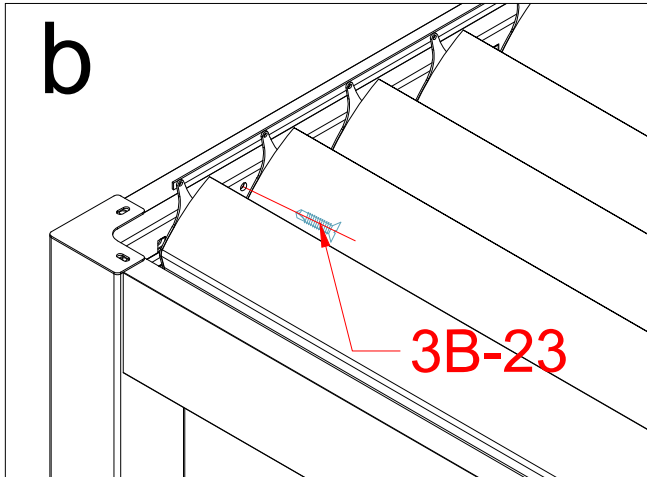

3B-23		10
3B-08		2







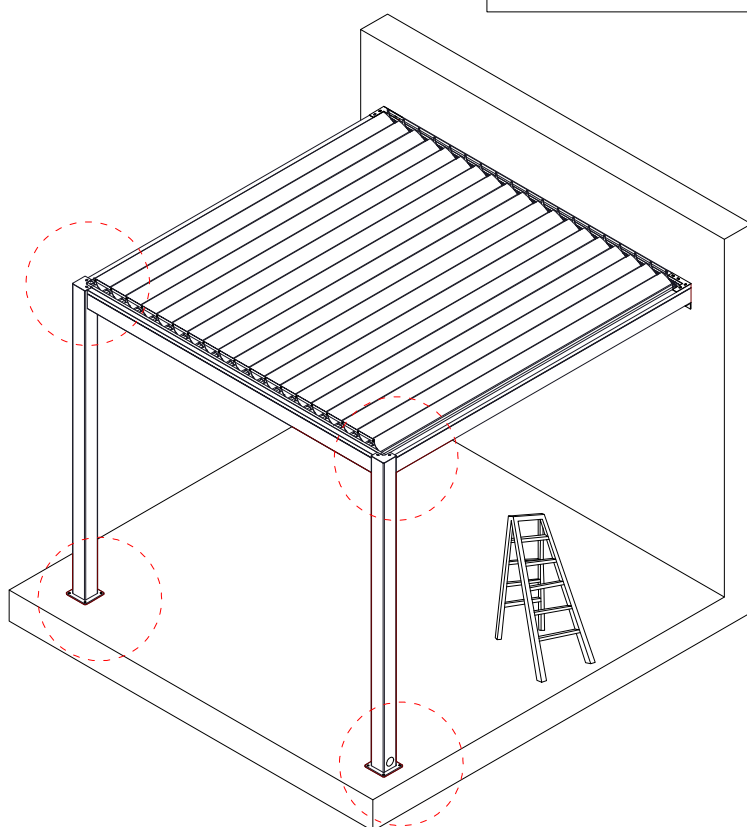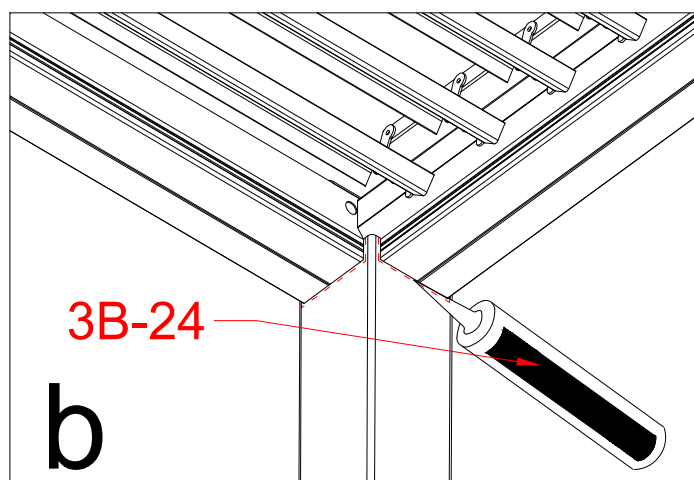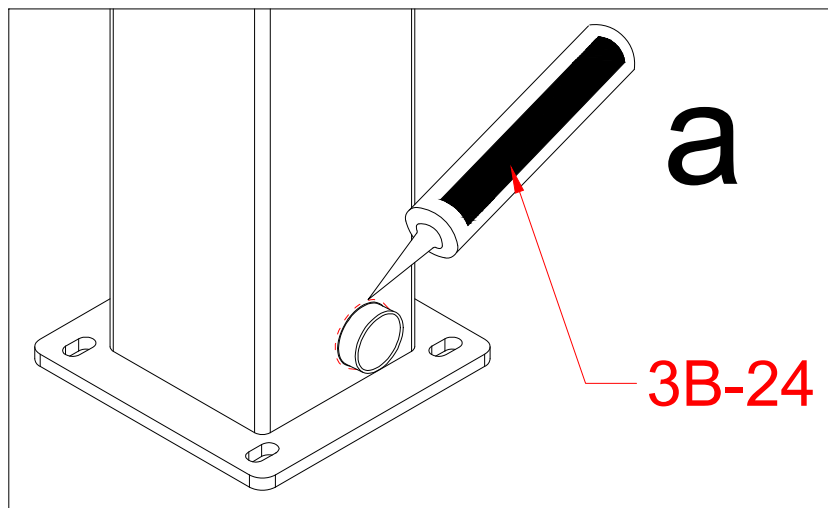

3B-24		1
-------	---	---




Warning
 In Snow / Wind season or in case of
 snow / wind forecast open up your shutters
 in vertical position to avoid any damaging
 on your pergola.

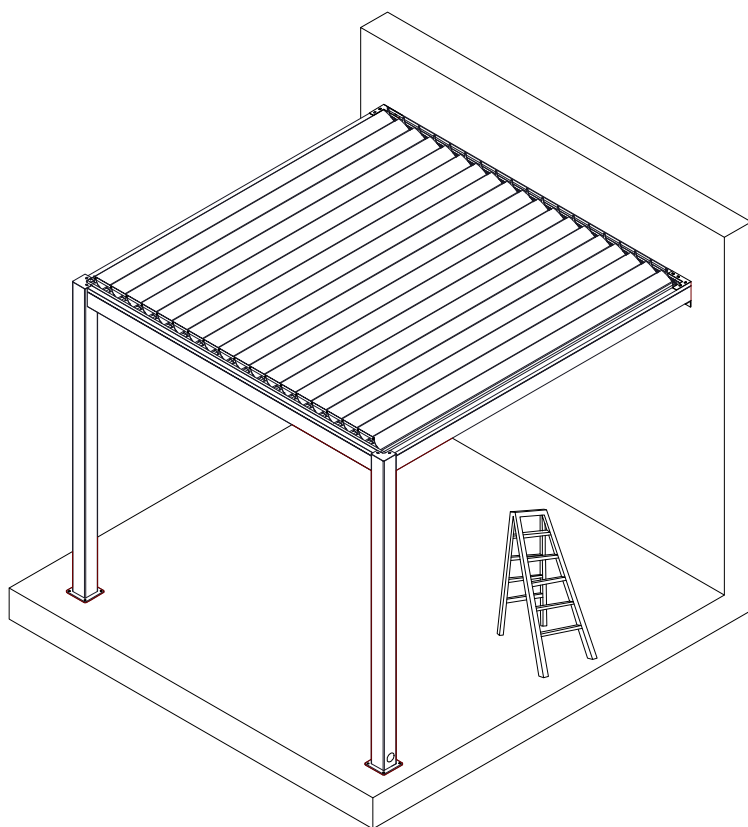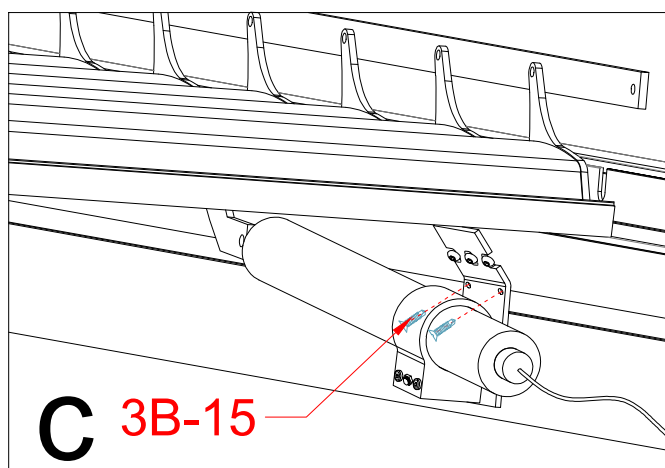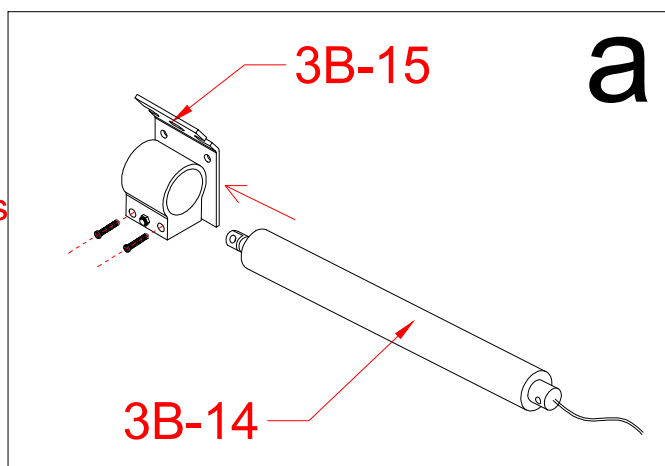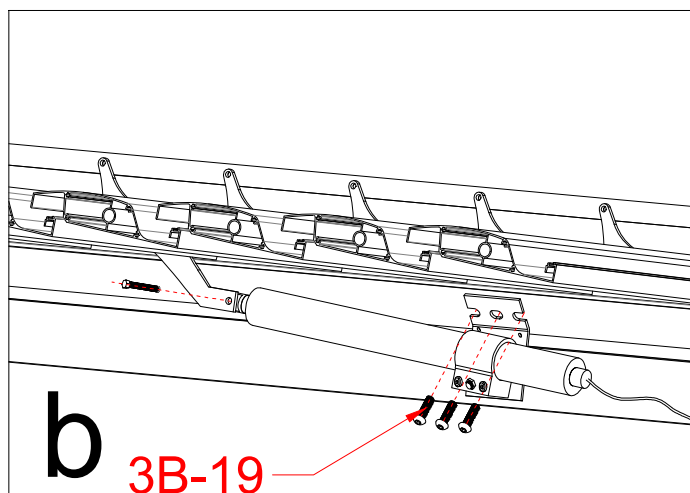

3B-14		1
3B-15		1
3B-19		3



Motor wires diagram

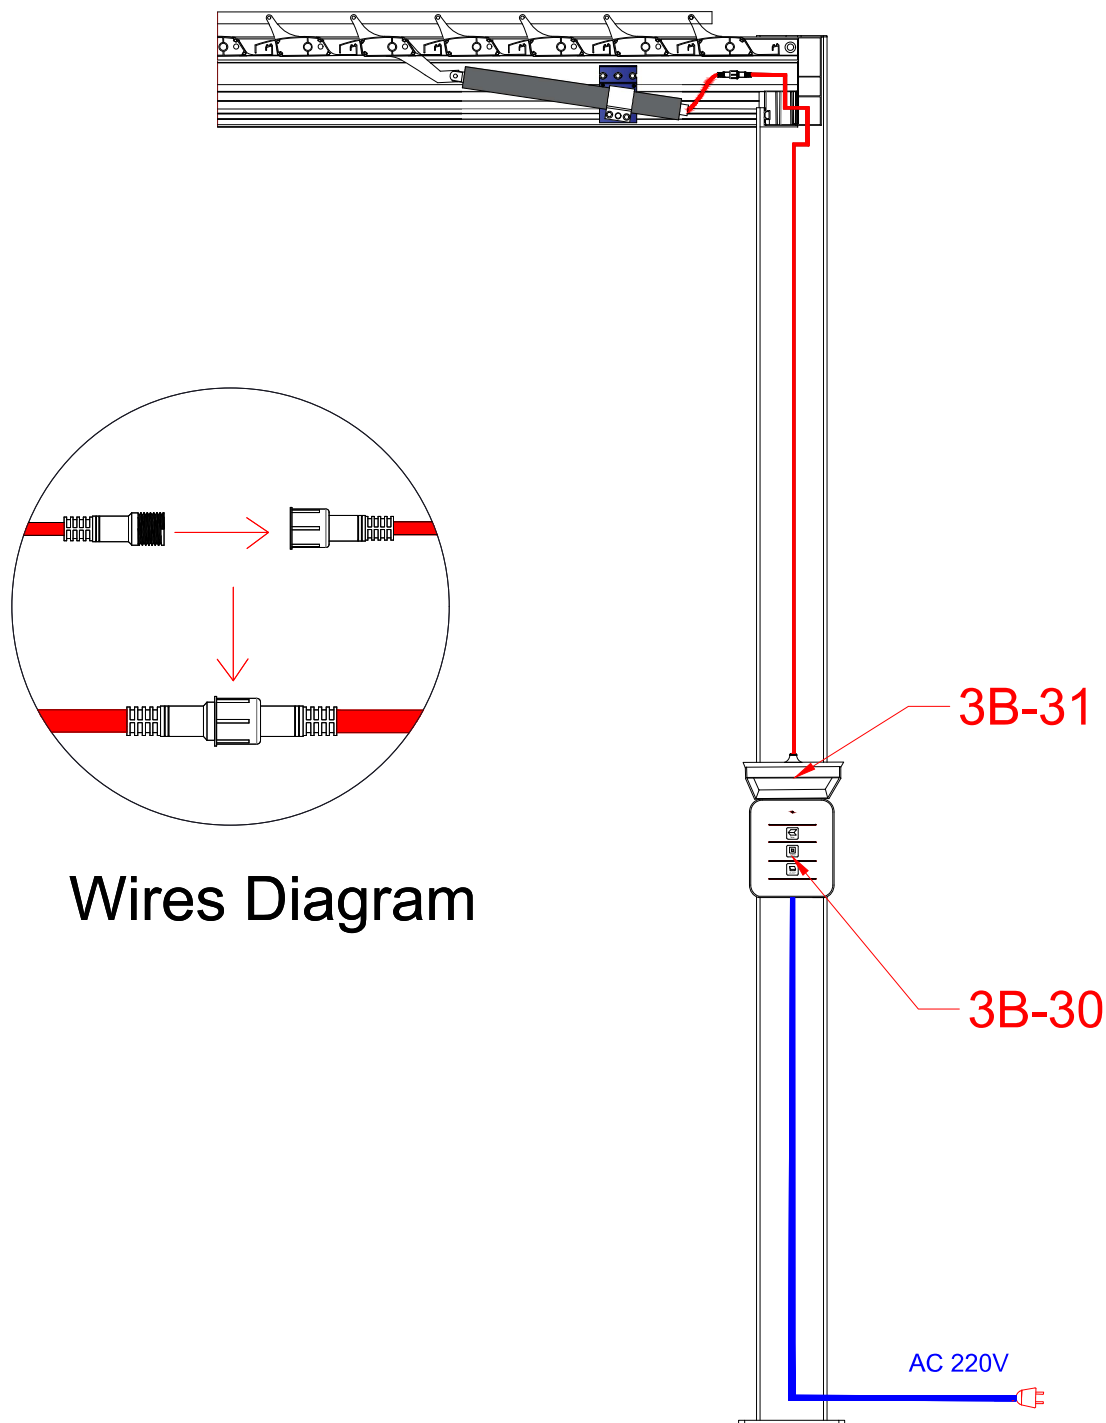

Wires Diagram

3B-30		1
3B-31		1



Motor wires diagram

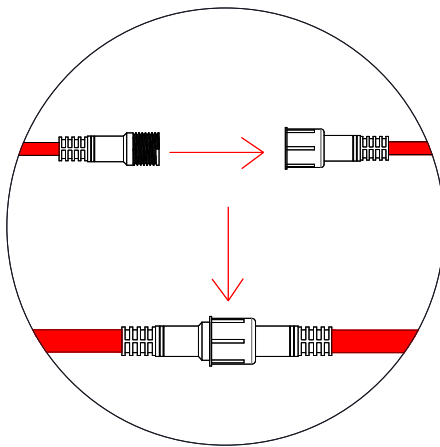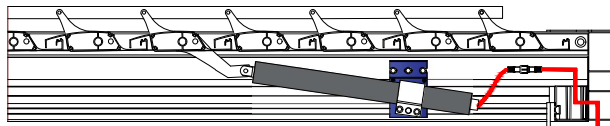

Wires Diagram

The threading mode that the control box is not on the column

E022
E012

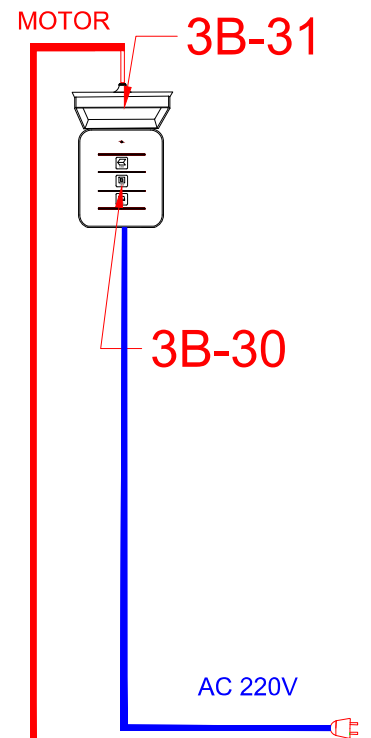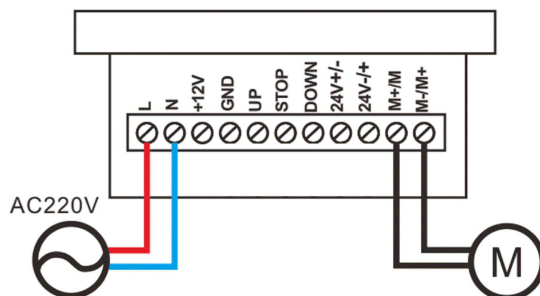

3B-30		1
3B-31		1

